Modular Bathroom

Installation Manual

Shelter-dom.com

Content

1. Tool Preparation.....2

1.1 Essential Tools.....2

1.2 Backup Tools.....2

2. Bathroom Installation.....3

2.1 Bathroom Drain Pipe Fitting and Wet/Dry Chassis Installation.....3

2.2 Interior Wall Panel Installation.....7

2.3 Ceiling Installation.....13

2.4 Internal Parts Installation.....14

2.5 Exterior Wall Panel Installation.....22

2.6 Quick Installation of Water and Electricity Lines.....37

2.7 Door Installation.....42

2.8 Loft Bed Installation.....46

3. Kitchen Installation.....47

3.1 Wardrobe Installation.....47

3.2 Bar Installation.....50

3.3 Bar Table Installation.....52

4. Checking and Cleaning.....52

Shelter-dome.com

1. Tool Preparation

1.1 Essential Tools

Rechargeable Electric Drill

PPR Pipe Cutter

Glue Gun

Laser Level

Tape Measure

Utility Knife

Philips Screwdriver

Allen Wrench

Glue Hammer

Marker Pen

1.2 Backup Tools

Portable Too Bag

Shelter-dome.com

TRAVEL

2. Bathroom Installation

2.1 Bathroom Drain Pipe Fitting and Wet/Dry Chassis Installation

2.1.1 Place the bathroom drain pipe fitting according to the overall plane size and the location of the drain outlet, to make sure it is placed at the same level as the floor. If the bathroom does not use an overhead platform, such as being placed directly on the concrete floor, the drain pipe fitting cannot be used. The required drain pipe and vent pipe should be pre-buried when the decking is made. Please refer to the diagram of pre-buried pipes without overhead platform.

Bathroom Drain Pipes

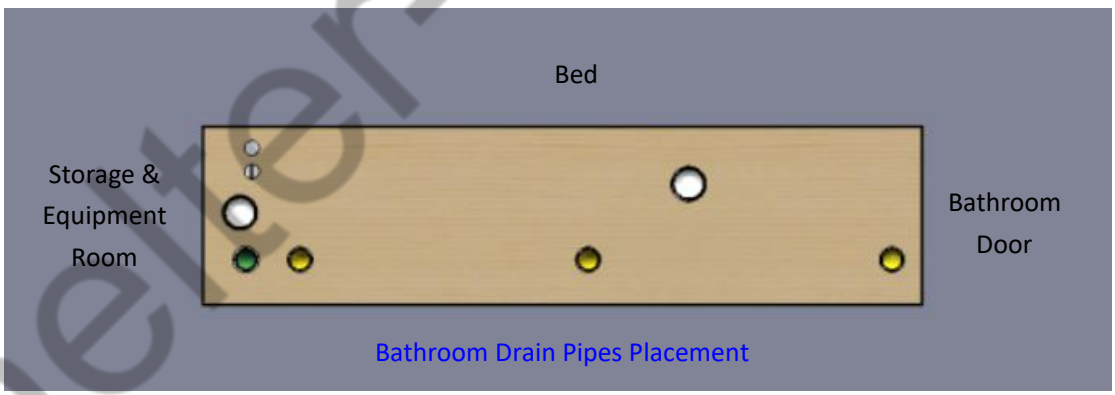

Bathroom Drain Pipes Placement

Shelter-dome.com

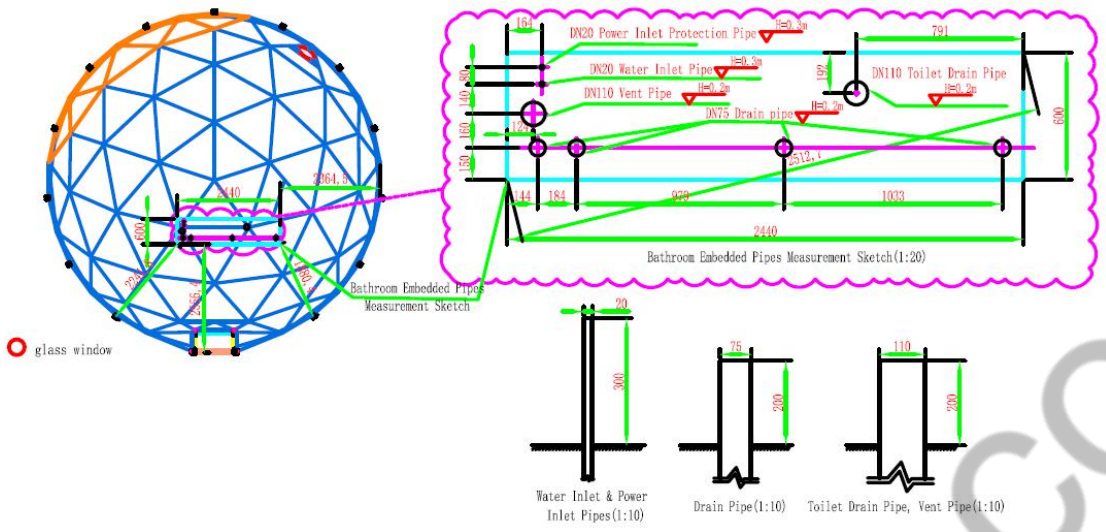

Pre-buried Pipes without Overhead Platform

2.1.2 Align the reserved floor drain holes and drain pipe holes in the chassis of the dry area and wet area in the bathroom. Install an aluminum square tube at the joint of the chassis in the dry and wet area, and place black quartz cap, and then Install the corresponding drain tube fittings.

2.1.3 The four sides of the dry area and wet area chassis are placed on the floor beam or the ground. Pay attention to leveling the four corners of the dry area and wet area so that they are horizontal; if the ground is not flat enough, you can use headless hexagon socket screws (black zinc plated), round iron washers (galvanized) and a laser level for adjustment. There are nuts pre-embedded on the chassis, tighten the fastening screws and put round steel washers on the bottom, adjust the level by adjusting the fastening screws. Adjust three points to the same level, other screws can be tightened until they touch the ground.

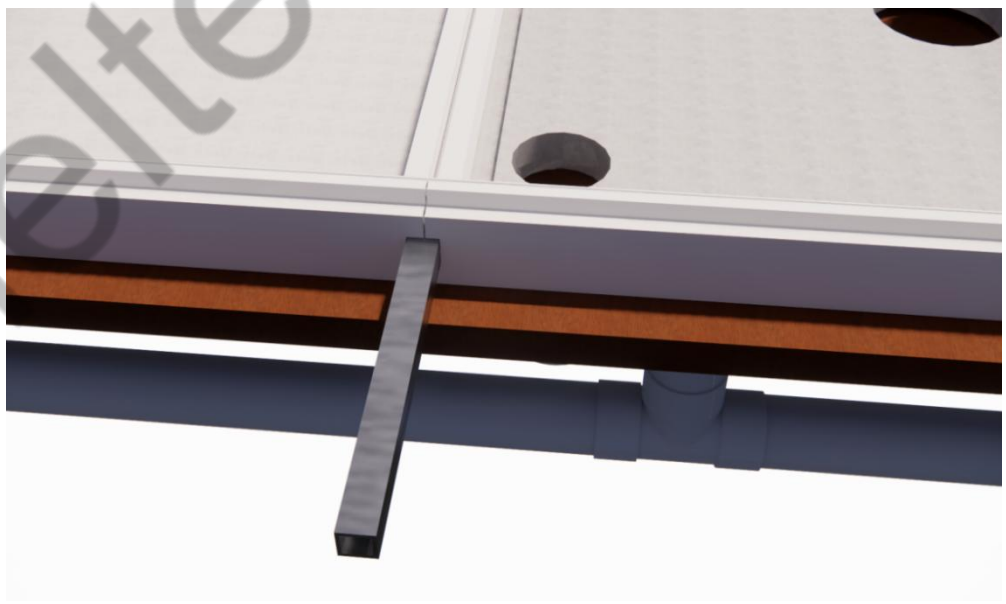

Shelter-Dome.com

TRAVEL

Black Quartz Cap (connecting the 2 glass fiber reinforced concrete bases)

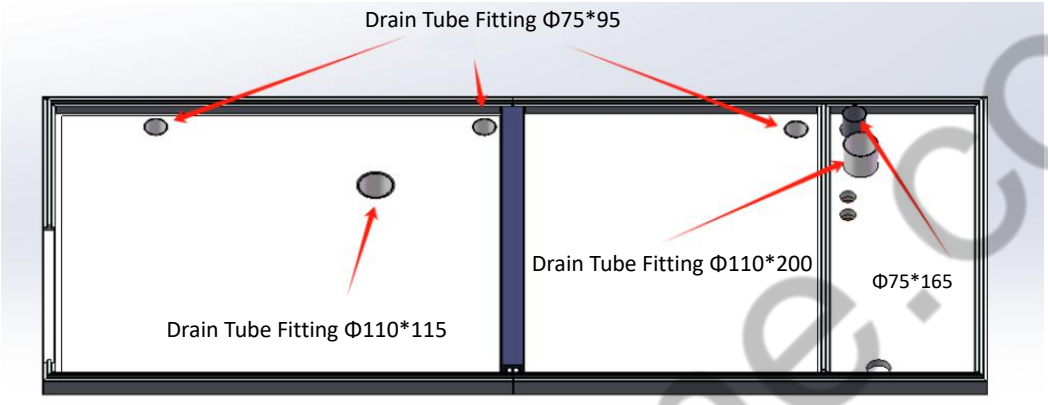

Chassis Installation

Adjust the three points to the same level, other screws can be tightened until they touch the ground.

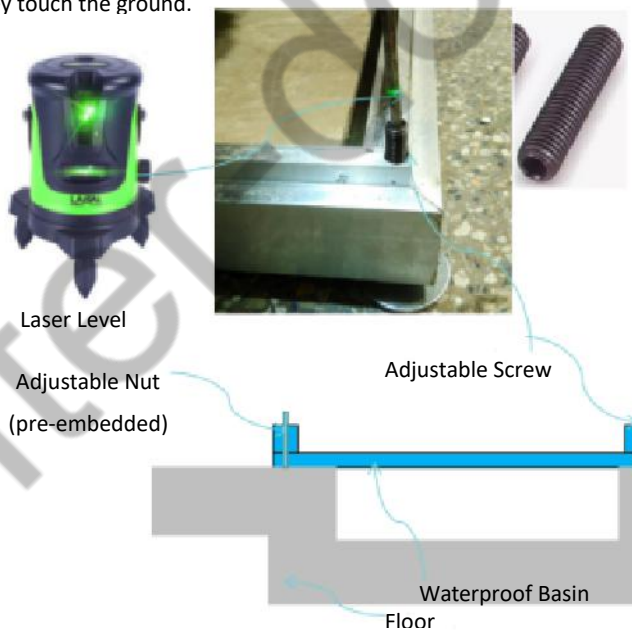

Chassis Level Adjustment

2.1.4 The drain tube fitting ϕ75*95 needs to be installed with a floor drain (square floor drain). Before installing the floor drain, first put the DN75 corrugated hose on the DN50 waterproof flange (male). Wrap black butyl rubber outside the corrugated hose until the diameter reaches ϕ75, and then

Shelterdome.com

insert corrugated hose into the inside of the ϕ75 PVC tube. In order to ensure the seal, the butyl rubber should be wrapped enough without leaving any gaps. The waterproof flange should be placed on the chassis with the waterproof flange sealing washer and tighten with the flange waterproof nut DN75, and finally cover the floor drain. The drain pipe ϕ110*115 is for the toilet, it is also necessary to install a DN80 waterproof flange nut (male) - dedicated for toilet drain, DN110 corrugated hose, black butyl rubber, and flange sealing washer DN110, but there is no need to cover with the flange nut, and no need to install a floor drain, either.

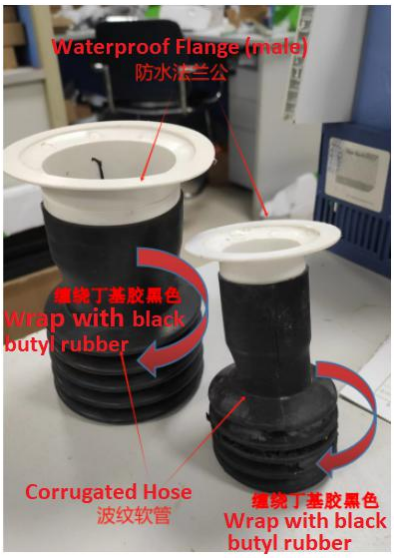

Floor Drain Installation

2.1.5 Before installing the interior wall panels, you need to install the male and female D-shaped EPDM rubber seal on the chassis, coming with 3M double-sided tape, 10mm high * 10mm wide. The sink is 9mm wide and installed between the interior wall panel and the chassis.

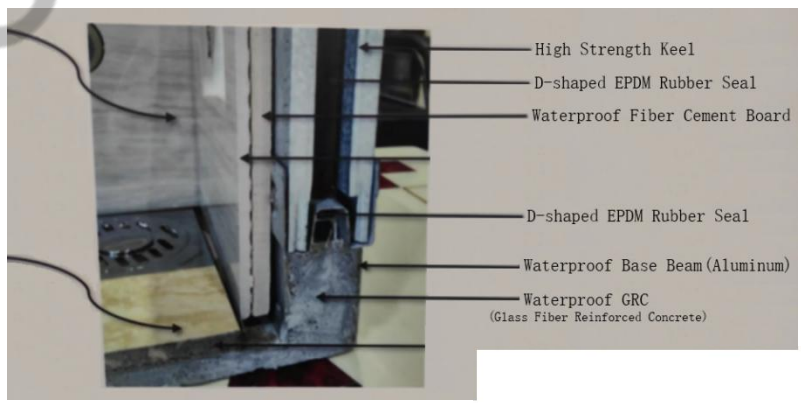

Male and Female Rubber Seal

TRAVEL

2.2 Interior Wall Panel Installation

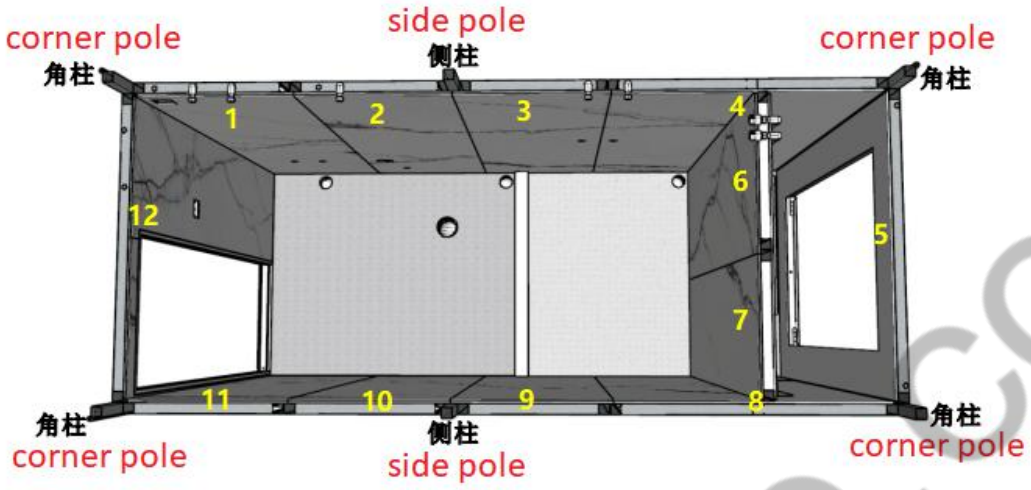

Interior Wall Panel Numbering Diagram

2.2.1 Install the corner pole between "Interior Wall Panel 11" and "Interior Wall Panel 12", fix the corner pole and keep it 90°perpendicular to the chassis.

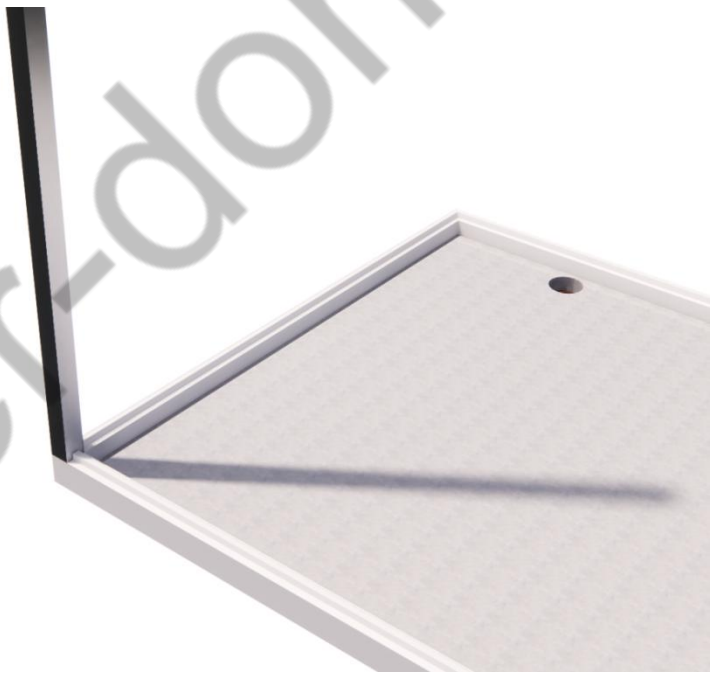

2.2.2 "Interior Wall Panel 11" Installation. First put the prefabricated kitchen and bathroom connectors on the corner pole, and then buckle the "Interior Wall Panel 11" to the connectors on the corner pole from top to bottom, with the bottom groove horizontally placed on the edge of the chassis.

Shelter-dome.com

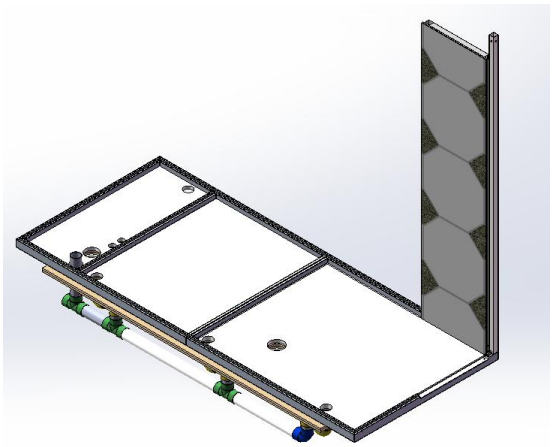

Note: All the connectors should be in the same direction.

2.2.3. Connectors are also used on the sides of the corner pole and the "Interior Wall Panel 11" to make them vertically close to the corner pole.

2.2.4. Install "Interior Wall Panel 12" and the corner pole on the other side. Before installing "Interior Wall Panel 12", you need to cut off the bottom beam (for transportation reinforcement), as shown in the picture above. "Interior Wall Panel 12" is connected to the corner pole with connectors.

TRAVEL

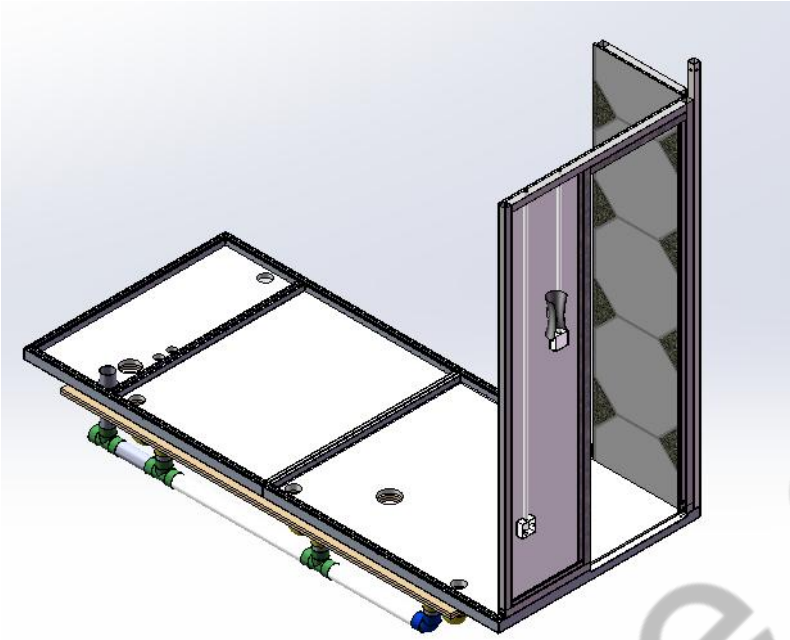

2.2.5. “Interior Wall Panel 1”, “Interior Wall Panel 2”, and Side Pole Installation. The installation method is the same as above. To ensure that the two wall panels are on the same level, you can use the wall panel connector to assist the installation. Fix the connector with stainless steel flat head self-tapping screw ST4.8*13 or hexagonal head self-drilling and self-tapping screw (with rubber pad) ST5.5*25. If the wall panels are installed well, you don’t need to use the wall panel connector. In order to ensure that the gap between the wall panels is uniform, a T-shaped connector can be placed at the connection position between the two keels (except at the corner), and stainless steel flat head self-tapping screw ST4.8*13 can be used to fix it on the keel. If the gap between the wall panels itself is uniform, T-shaped connector is not needed.

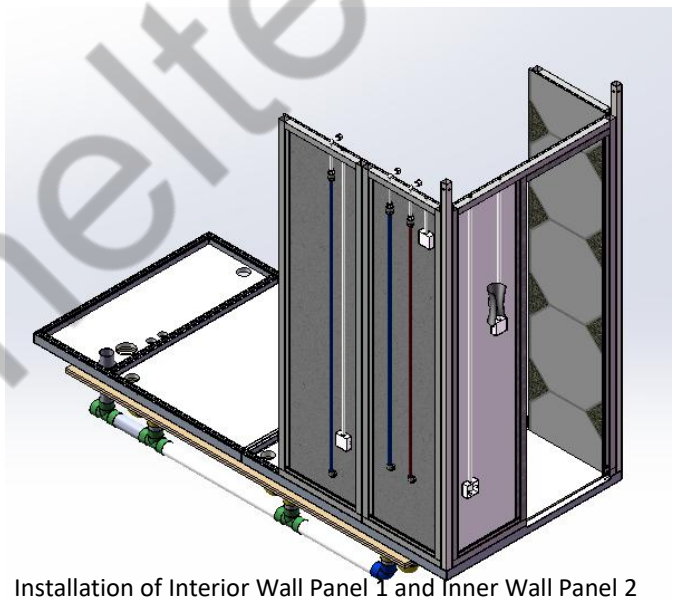

Installation of Interior Wall Panel 1 and Inner Wall Panel 2

Interior Wall Panel Connector

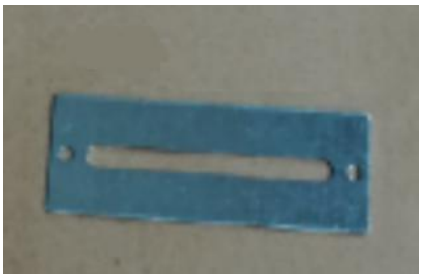

Shelter-dome.com

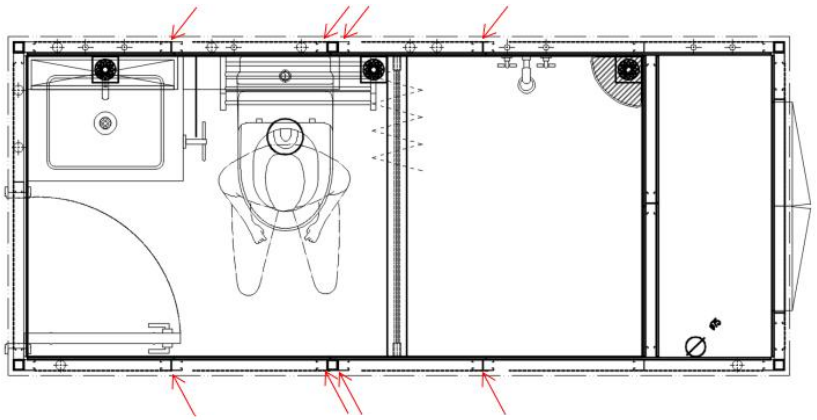

Where T-shaped connectors to be installed

T-shaped connector

2.2.6. “Interior Wall Panel 10” and Side Pole Installation. The installation method is the same as above.

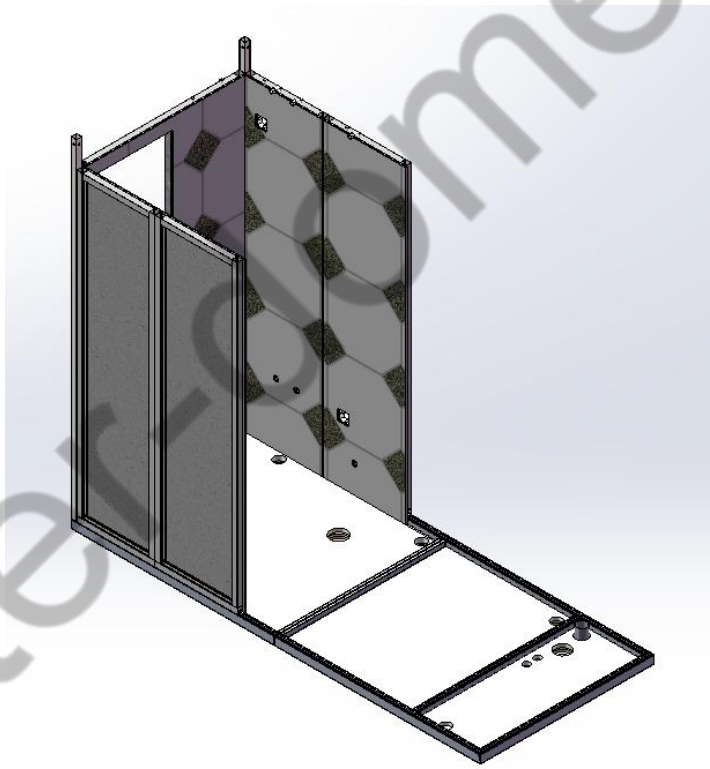

2.2.7. "Interior Wall Panel 3", "Interior Wall Panel 4" and Corner Pole Installation. The installation method is the same as above.

Shelter-home.com

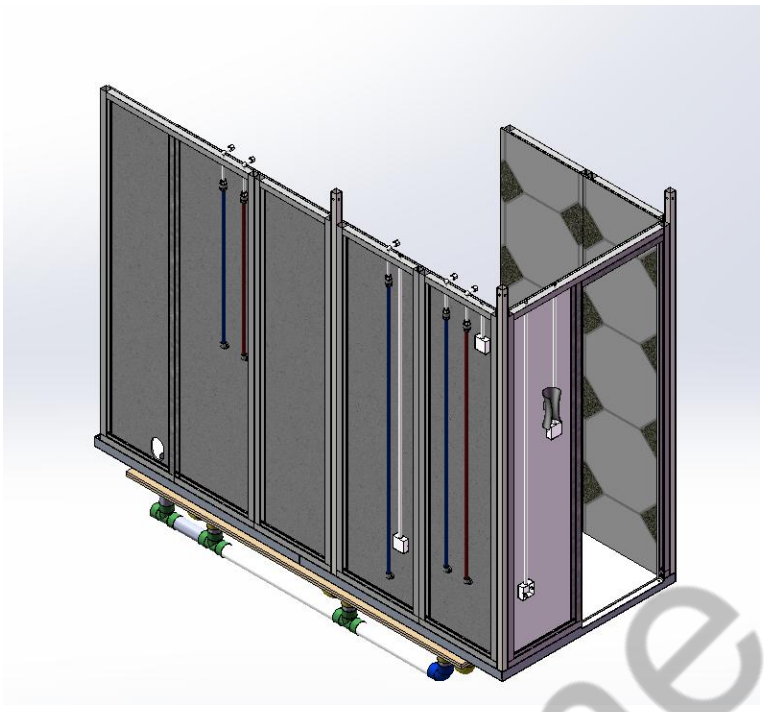

2.2.8. "Interior Wall Panel 6" and "Interior Wall Panel 7" Installation. In addition to matching with the chassis, "Interior Wall Panel 7" also needs to be fixed on the side with self-tapping screw on "Inner Wall Panel 8". Same for "Interior Wall Panel 6". The installation method of "Interior Wall Panel 5" is the same as above.

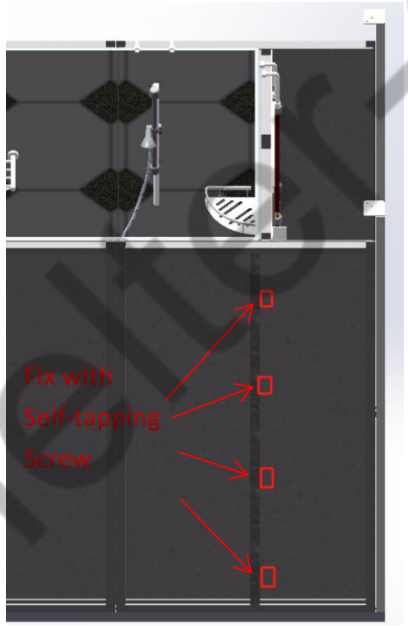

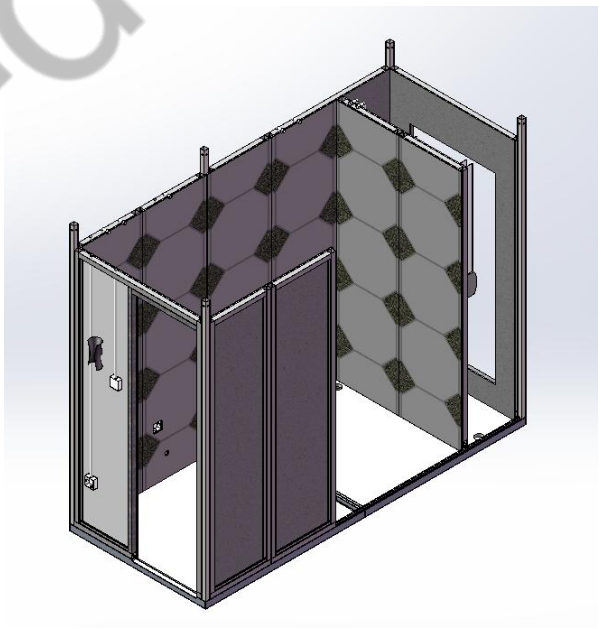

2.2.9. Finally, install "Interior Wall Panel 9", "Interior Wall Panel 8" and corner pole. The installation method is the same as above.

Shelter-dome.com

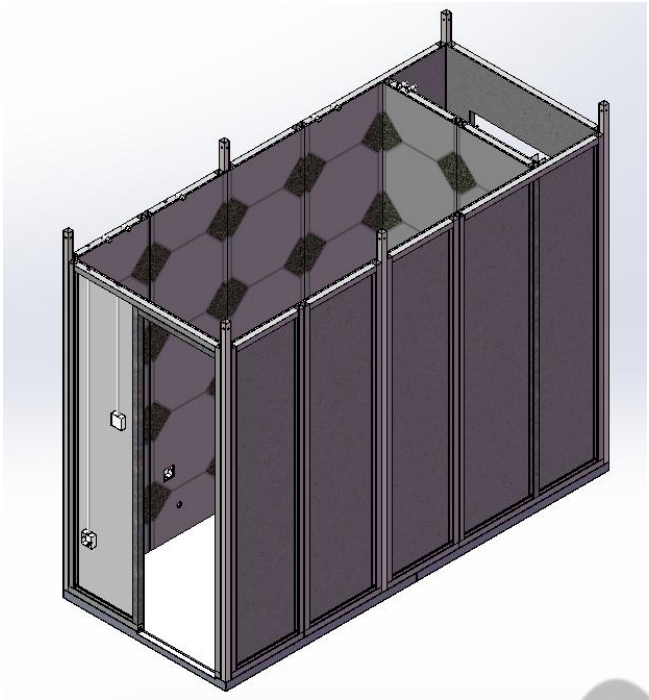

Note: 1. When installing, make sure the wall panel surface is horizontal and vertical;

2. The side of the wall panel with the water and electricity connector is at the top, and the side with the concave slot is at the bottom.

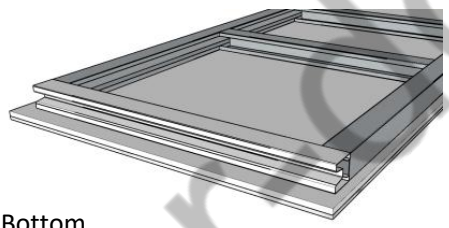

Bottom

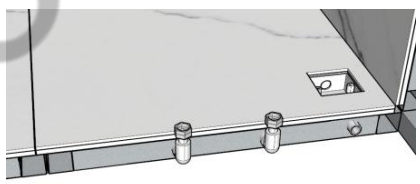

Top

2.2.10. To make the wall panel connection stronger, customized L-shaped steel connectors are used for reinforcement. The connectors are fixed to the keel by stainless steel flat-head self-tapping screw ST4.8*13. The reinforcement position is at the top L-shaped connector position of the wall panel.

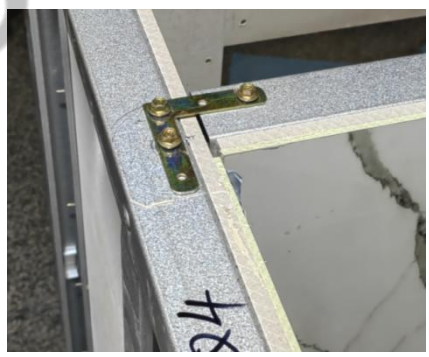

L-shaped Steel Connector

Shelterhome.com

TRAVEL

2.2.11 For the purpose of beauty, decorating rubber seals are designed to seal the gaps between wall panels at the junctions of the interior wall panels, T-shaped rubber seal are used at the connection between wall panels and ceilings, T-shaped rubber seals are installed at 90° wall panel connections, and 180° wall panel connections are installed with the Y-shaped rubber seals as shown in the picture below.

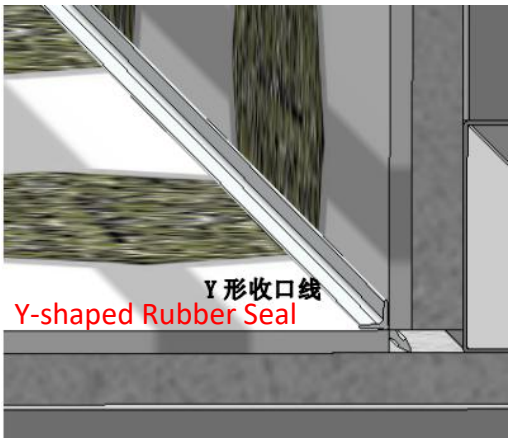

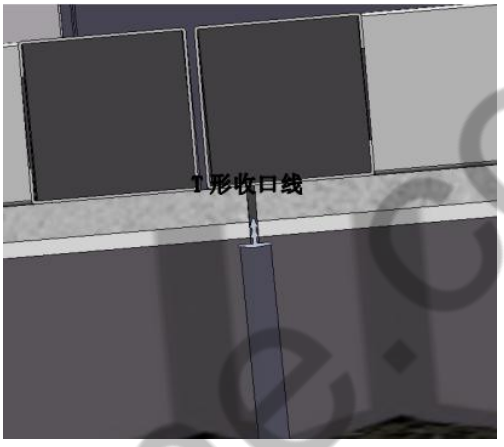

Interior Wall Panel Rubber Seal Installation

2.3 Ceiling Installation

2.3.1 Have the prefabricated ceiling assembly with the ceiling panel facing down and the pipelines facing up. Align it with the water and electricity line interface and place them flat, then fix the ceiling on the wall panel keel every 300 to 400mm with hexagonal self-tapping self-drilling screw ST4.2*25.

2.3.2 Use corrugated hose to connect the water pipes at the same position on the wall panel and ceiling assembly. Here, use the "4-point

Shelterdome.com

Double Inner Thread 304 Stainless Steel Corrugated Water Inlet Pipe 30CM" and the aviation plugs of the same number to be connected together.

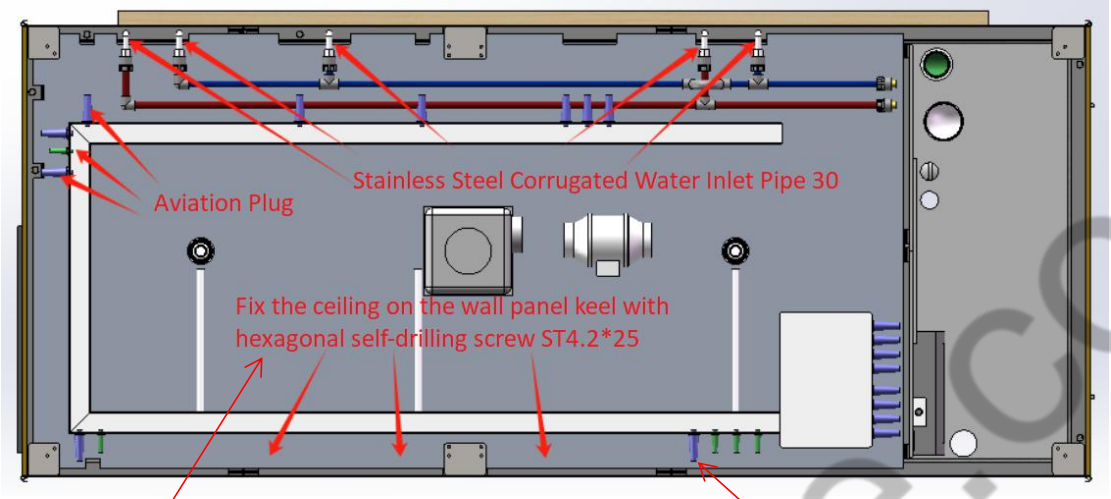

Ceiling Assembly

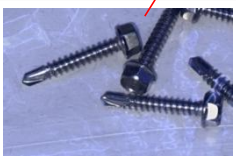

ST4.2*25 Screw

Aviation Plug

2.4 Interior Parts Installation

2.4.1 Toilet Installation

Step 1 Confirmation of Pit Distance

Before installing the toilet, you must first determine whether the pit distance of the purchased product is consistent with the pit distance of the sewage pipe at the installation location. The specific measurement method is: the distance from the center of the sewage hole on the ground to the wall behind the toilet.

Shelter-dome.com

Step 2 Toilet Drain Pipe Verification

Carefully inspect the drain pipe to see if there are mortar, waste paper and other debris in the pipe to prevent later blockage; at the same time, check whether the installation floor of the toilet is level, and then install the toilet drain pipe after confirmation, the reserved height of the drain pipe should be 1 -1.5cm above the ground, see picture below.

Step 3 The Toilet Drain Pipe Center Conformation and Flange Installation

One simple way to confirm the center of the toilet drain pipe to turn the toilet over, then determine the center on the toilet's drain outlet, and draw a cross center line in the center, and the cross center line should extend to the feet around the toilet, then open the flange and install it on the product drain outlet. In order to ensure that leakage occurs later, glass glue can also be applied around the drain pipe to fix it.

Step 4 Toilet Fixing

When fixing the toilet, first align the center line of the toilet drain outlet with the center line of the ground drain outlet to ensure that the

Shelter-dome.com

toilet is installed horizontally, and then tighten the sealing ring.

Step 5 Toilet Bottom Sealing

A. After installing the toilet, put a circle of glass glue around the toilet and try not to break it when applying glue, so as not to affect the anti-odor effect.

B. Co-extruded wood-plastic composite flooring - installed in teak color, the flooring is laid directly on the dry and wet areas of the chassis without the need for fixing methods such as brushing glue or nails. It is not laid in the equipment room and is cut into different sizes according to actual requirements. Leave gaps in the dry and wet areas of the chassis, toilets, floor drains, and water retaining stones.

Shelter-home.com

Wood Floor

C. Stainless Steel Bathroom Cabinet - Main Cabinet Installation

Place the cabinet according to the position shown in the picture, and align the main cabinet installation holes with the reserved holes on the wall panel *(if the hole position is not accurate, you can drill the hole yourself. To avoid drilling and breaking the water pipe, check before drilling. Use the water and electricity pipe layout diagram on the water bar side to confirm that there are no water and electricity pipes at the opening position before opening holes)*. Use the screws that come with the main cabinet to fix the main cabinet to the wall panel. Connect the stainless steel angle valve to the water outlet of the wall panel, and connect the other end to the corrugated hose to the hot and cold water faucet to the basin drain, then seal the wall panel with white glass glue after check and adjust the countertop to level. Note:

1. Ensure the level of the sink and the tightness and sealing of the water inlet hose and sewer pipe;
2. The glass glue must be even in thickness and smooth, with no residual glue.

Shelter-dome.com

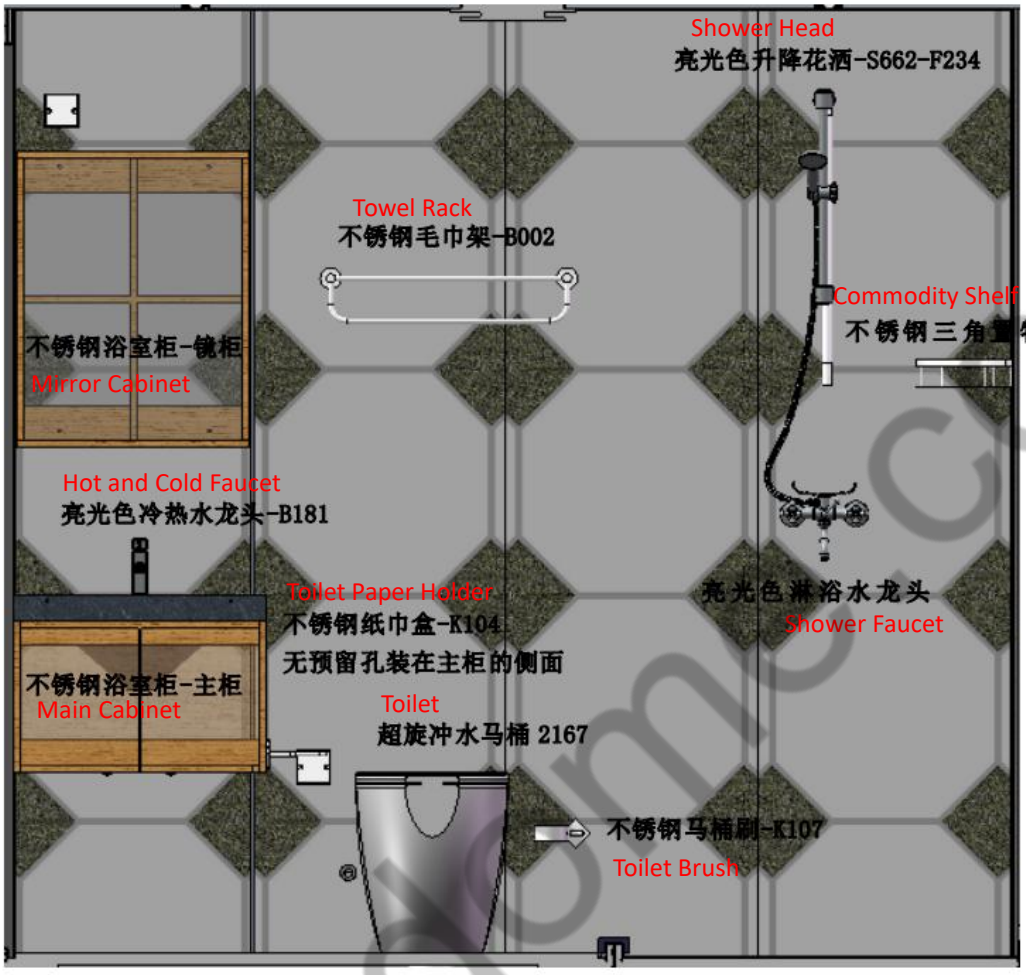

Bathroom Interior Accessories Installation Diagram

Shelter-dome.com

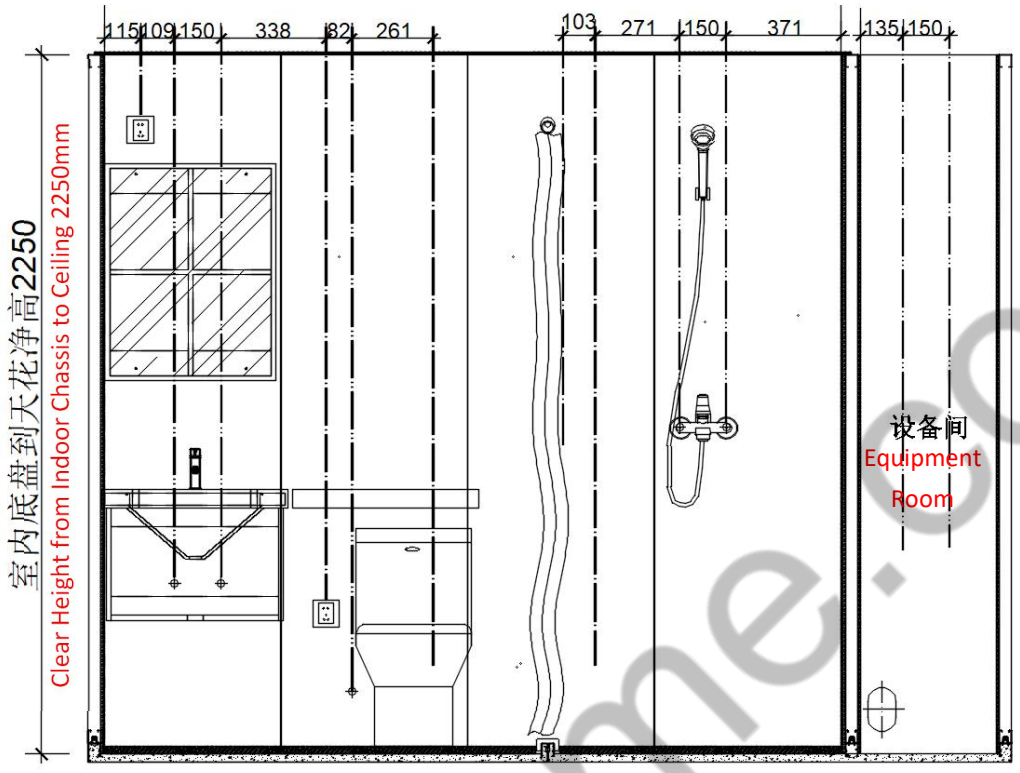

Water and Electricity Pipe Layout Diagram in the Kitchen

Connect the stainless steel angle valve to the water outlet of the wall panel, and connect the other end to the corrugated hose to the hot and cold water faucet to the basin drain

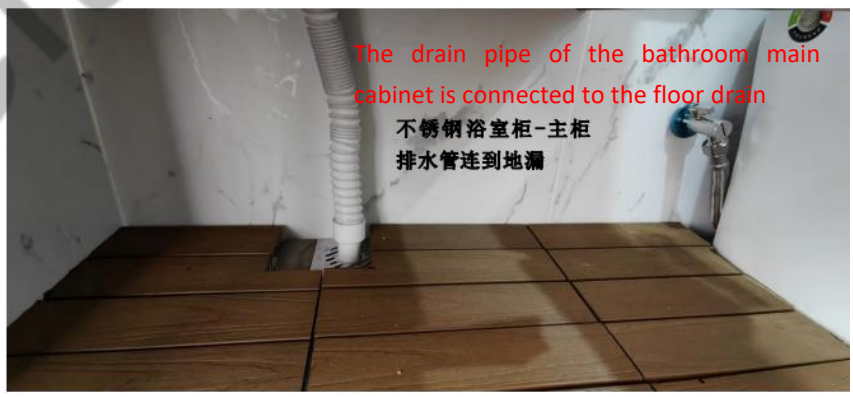

Stainless Steel Bathroom Cabinet - Main Cabinet Installation

Shelterhome.com

D. Stainless Steel Bathroom Cabinet - Mirror Cabinet Installation.

Align the reserved holes, fix the base of the mirror cabinet with the provided screws, and then hang the mirror cabinet body on the base. For the installation location, please refer to the bathroom interior accessories installation diagram. Note:

1. Ensure the level and verticality of the mirror cabinet;
2. Ensure the installation of the mirror cabinet is firm and not loose.

E. Towel Rack Installation. First, fix the towel rack base, then buckle the towel rack body into the base and tighten the screws. Note:

1. Ensure the levelness of the towel rack;
2. Ensure the towel rack is firmly installed and not loose.

F. Toilet paper holder, toilet brush, clothes hook-K575 *(the clothes hook is installed on the wall panel on the other side where there are the reserved holes)* Installation. Align with the reserved holes and securely fix them.

G. Shower Curtain Installation. Connect the magnetic shower curtain to the sliding rod according to the instructions, and rotate and adjust the knobs at both ends of the sliding rod to fix it tightly. The installation position is at the boundary between dry and wet areas *(the sliding rod is installed without nails or glue)*.

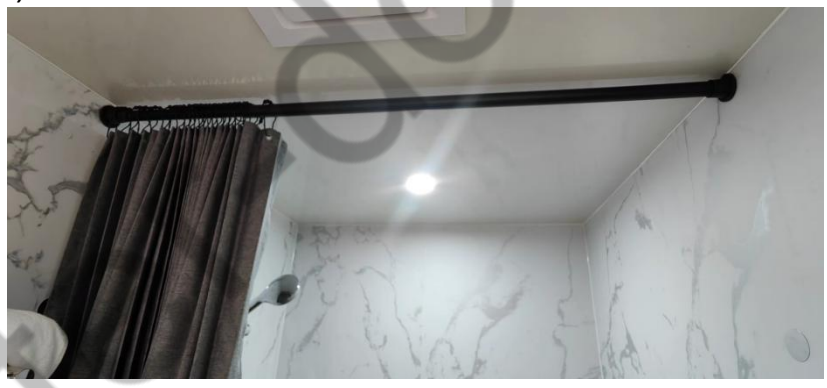

Shower Curtain Installation

H. Installation of Shower Head and Wall-mounted Commodity Shelf. Install the base of the bright-colored shower head-S662 to the reserved hole on the wall panel with its own self-tapping nails, and fix the bright-colored shower faucet-F234 directly to the water pipe joint of the wall panel, then connect the connected shower head and hose to the faucet body and fix it to the shower base.

Shelterdome.com

Shower Installation Diagram

Shelter-dome.com

2.5 Exterior Wall Panel Installation

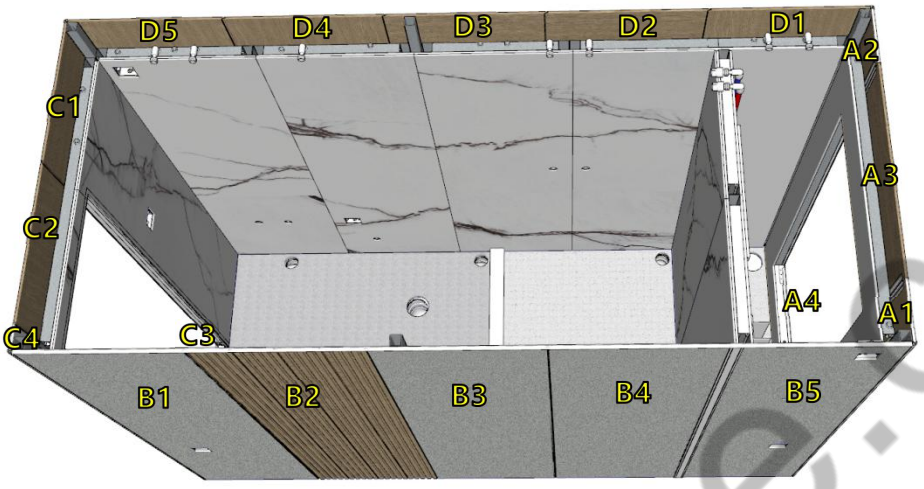

Exterior Wall Panel Numbering Sequence Diagram

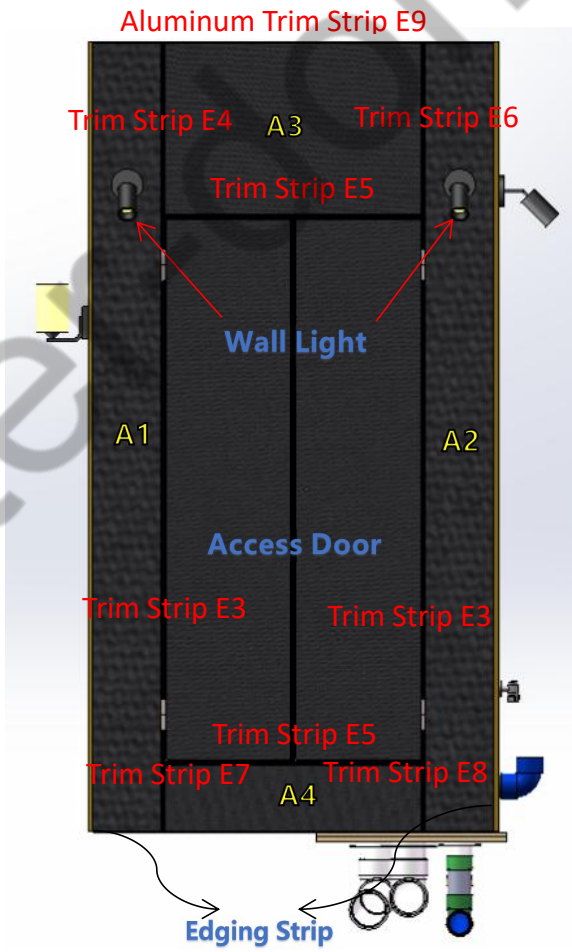

Shelter.com

TRAVEL

Aluminum Trim Strip "N1"

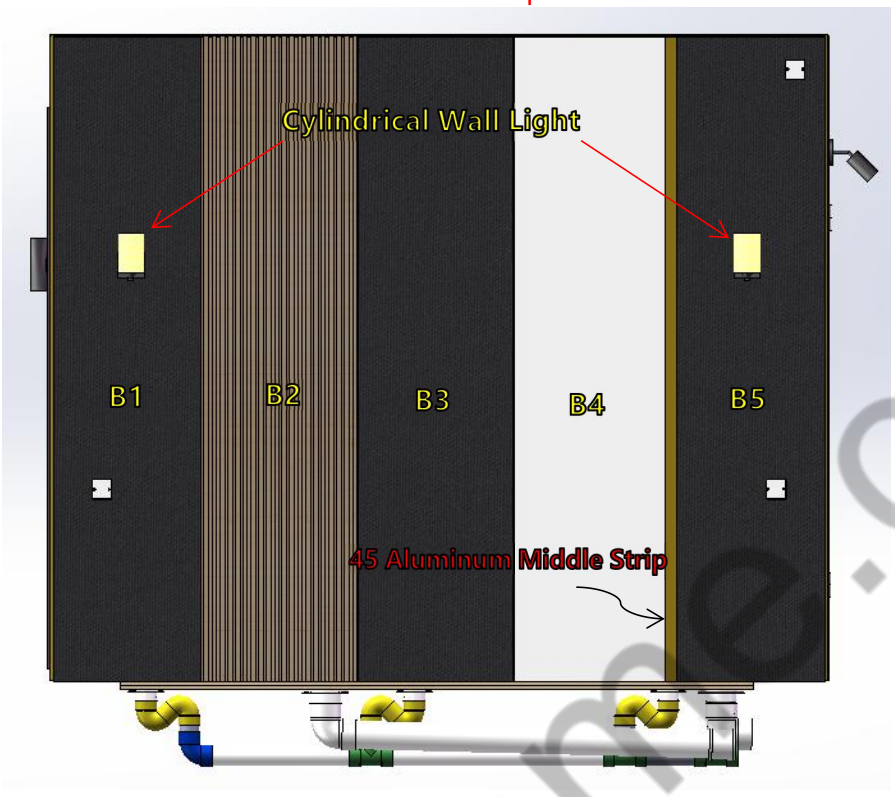

Shelter-dome.com

Aluminum Trim Strip "N1"

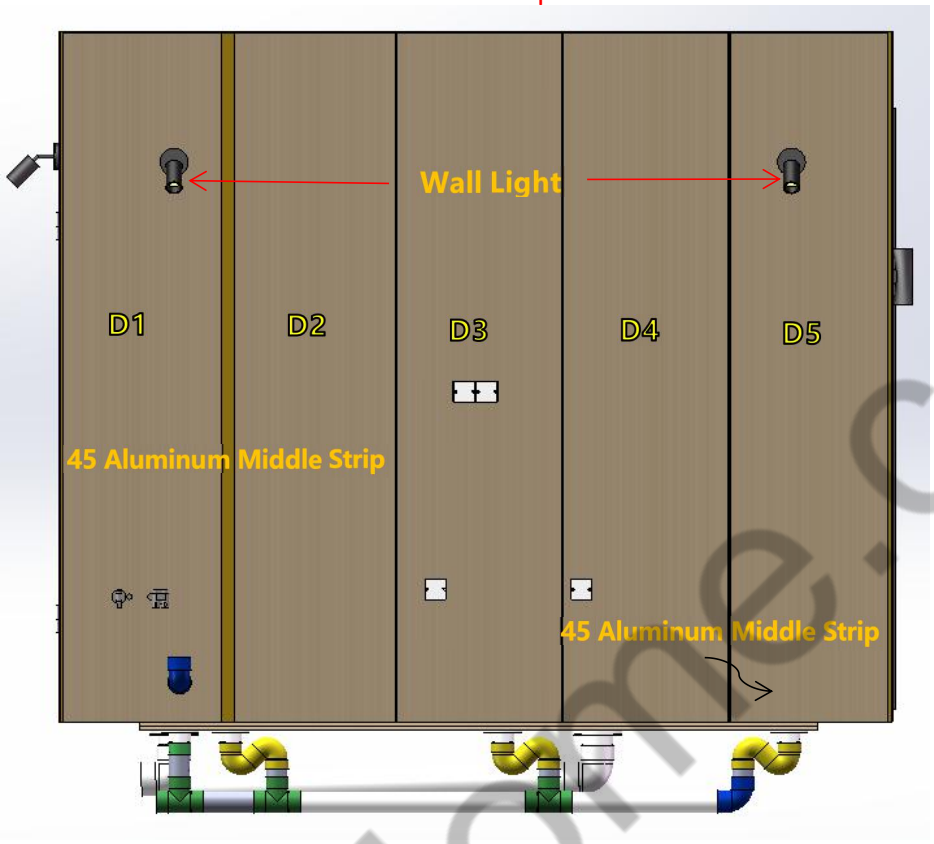

Exterior Wall Panel Numbering Schematic Diagram of Each Facade

2.5.1 Exterior Wall Panel Lighting Installation

A. Before installing the exterior wall panels, install the corresponding lights on the exterior wall panels.

Wall Light (near bathroom door): 1 pc
Wall Light (Bedroom): 2 pcs
Wall Light: 4 pcs

Install the lighting holders near the lead wire and fix them with the self-tapping screws, and connect them with quick-plug connectors to make sure there is no looseness. Then install the lighting holder, cover the wire inside the lighting holder, screw on the lighting holder and tighten the lighting and lighting holder with screws. See the picture below. The installation methods for other lighting are similar. Please refer to the wall panel numbering diagram for the installation location of the lights.

Shelter-dome.com

There is no reserved fixing hole for the lighting holder, and it needs to be drilled on site. The hole location is near the lead wire.

quick-plug connector

Wall Light Installation Diagram

B. Installation of the Exterior Wall Panels on the Storage and Equipment Room Door Side

First place the edging strip and the Aluminum trim strip on the corner column and keel on the left side of the access door, align the side column and keel, and fix with cross-recessed pan-head self-tapping and self-drilling screws ST3. 5*13 (every 400 - 500mm interval), and then insert the A1 exterior wall panel into the grooves of edging strip and the Aluminum trim strip. If it is difficult to insert the panel into the groove, you can use glass glue (neutral silicone weather-resistant sealant 300ML-transparent) to stick the panel and the Aluminum trim strip together, and then use glass glue to stick the panel to the keel (as shown in the picture)

Shelter-dome.com

Edging Strip and Aluminum Trim Strip E3 Fixing Method

Edging Strip and Aluminum Trim Strip E3 Installation Locations

Shelter-dome.com

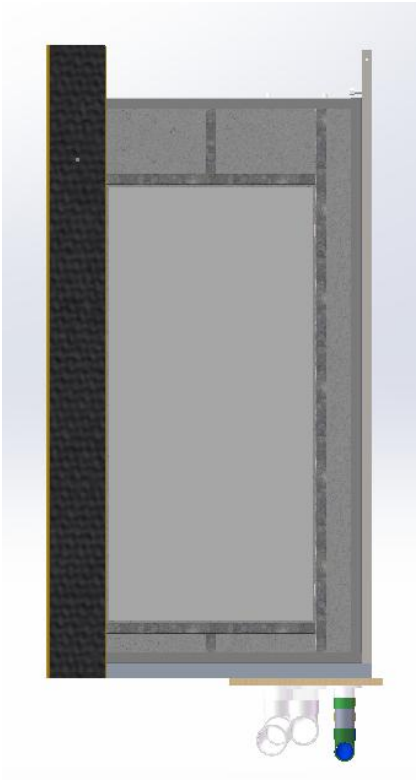

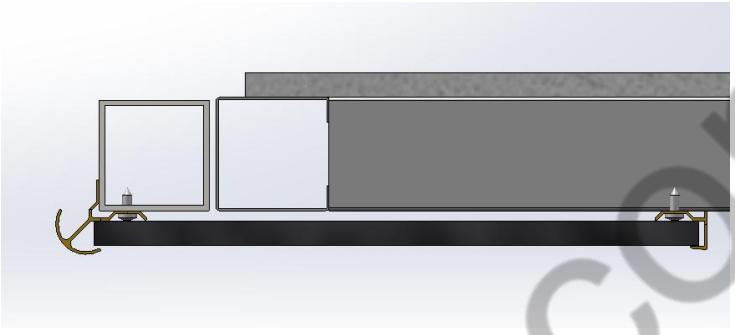

A1 Panel Installation

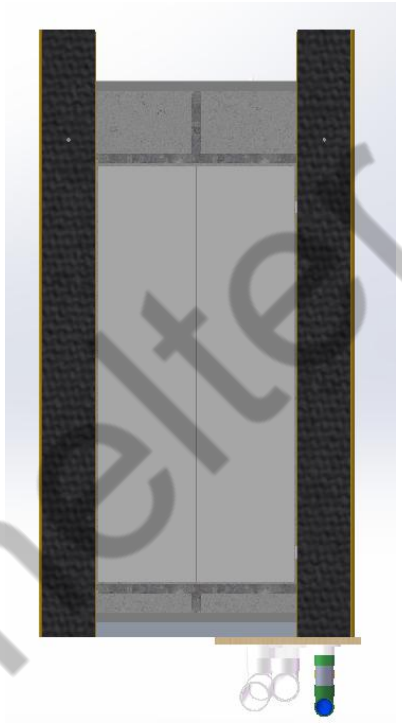

A2 Panel Installation: same as A1

Shelter-dome.com

TRAVEL

A3 Exterior Wall Panel Installation.

First fix the Aluminum trim strip E4, E5, and E6 on the keel with cross-recessed pan-head self-tapping and self-drilling screws ST3. 5*13 (every 400 - 500mm interval) . If it is difficult to install, you can also use glass glue, and insert the A3 panel from above and fix it.

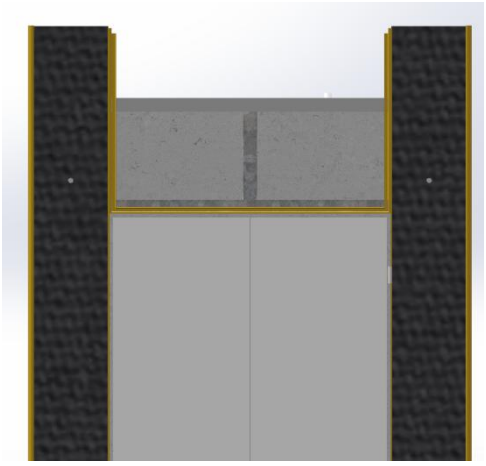

Edging Strip Installation

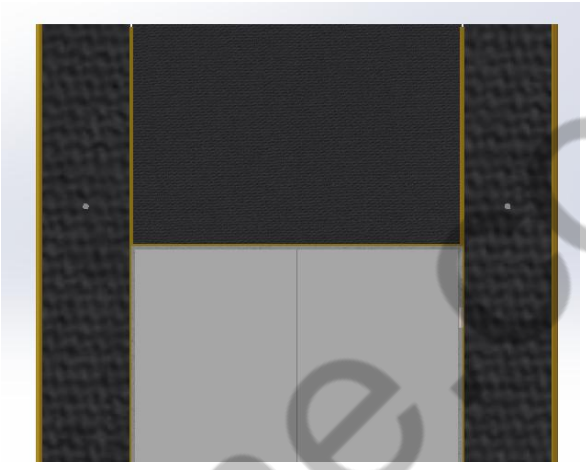

A3 Panel Installation

A4 Exterior Wall Panel Installation.

First fix the Aluminum trim strip E7 and E8 with cross-recessed pan-head self-tapping and self-drilling screws ST3. 5*13 (every 400 - 500mm interval) to the keel. If it is difficult to install, you can also use glass glue, and insert the A4 panel from above, then press the Aluminum trim strip E5 on it and fix with glass glue.

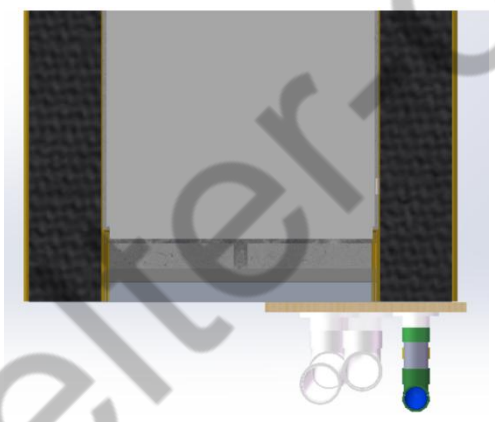

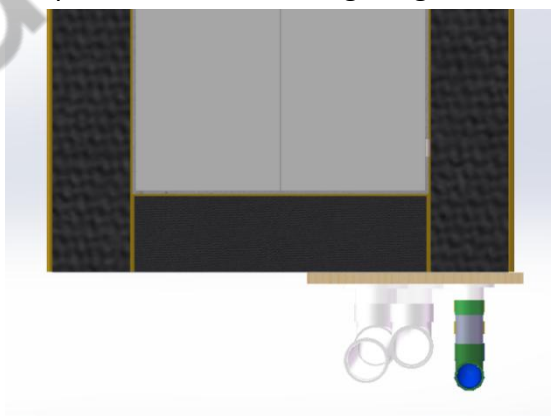

C. Installation of the Exterior Wall Panel on the Bed Side

First, place the edging strip on the corner column on the right side of the bathroom entrance door, align the side column, and fix it on the keel with cross-recessed pan-head self-tapping self-drilling screws ST3.5*13 (every 400 - 500mm interval). Insert the flat end of MB1330-exterior wall panel B1 into the edging strip, with the female groove end of the edge facing outward. Snap the 9mm wall panel connector into the female groove and fix it on the keel with cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13 (every 400 - 500mm interval).

Shelter-dome.com

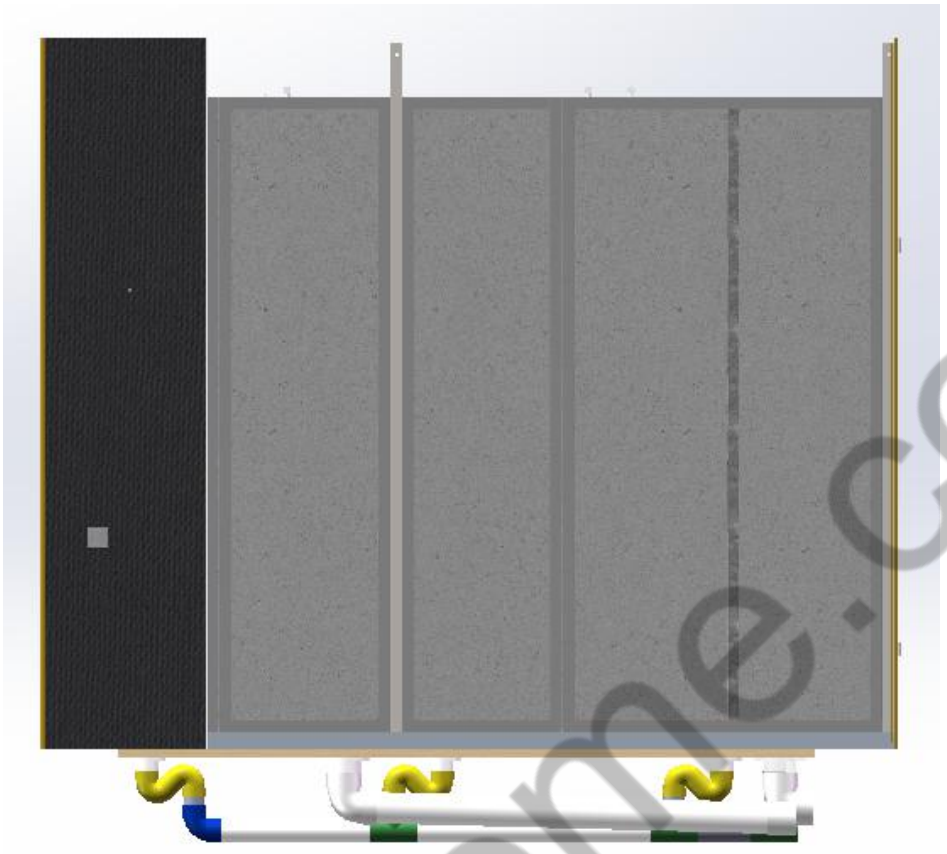

MB1330-Exterior Wall Panel B1 Installation

Edging Strip Fat End

This panel side is the female groove.

Shelter-dome.com

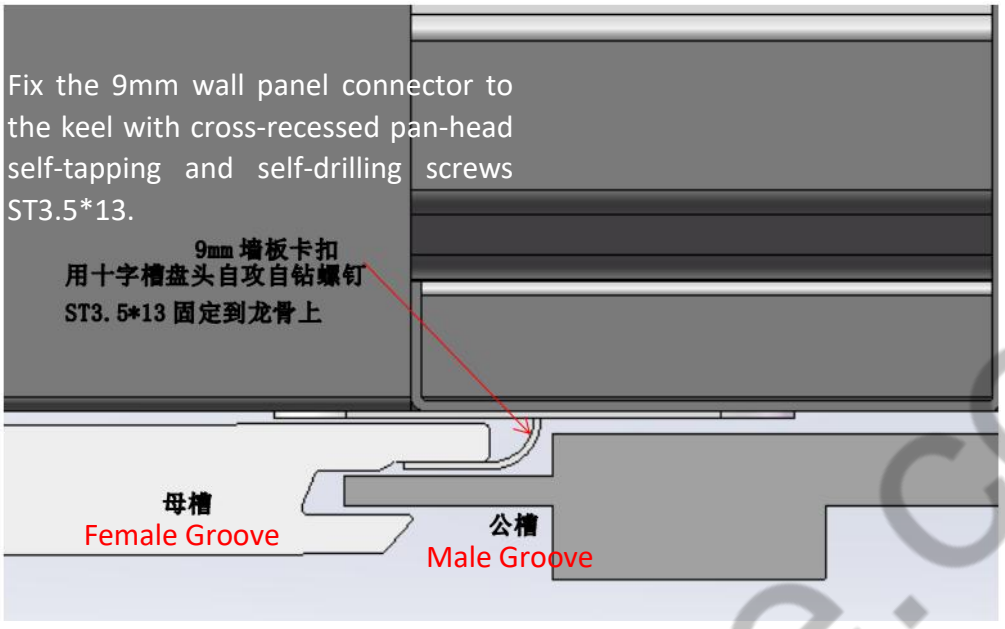

MB1330-Exterior Wall Panel B1 Installation Details

D. Installation of the Exterior Wall Panel B2

The male groove of the B2 wall panel on the left is matched with the female groove of the B1 wall panel. The female groove of the B2 wall panel on the right is held with a 9mm wall panel connector, fix the wall panel connector with cross-recessed pan-head self-tapping and self-drilling screw ST3.5*13 (every 400 - 500mm interval) on the keel, and the four B2 wall panels are connected with male and female grooves. The right female groove of the B2

TRAVEL

Shelter-dome.com

wall panel will match the male groove of the B3 wall panel, as shown in the figure:

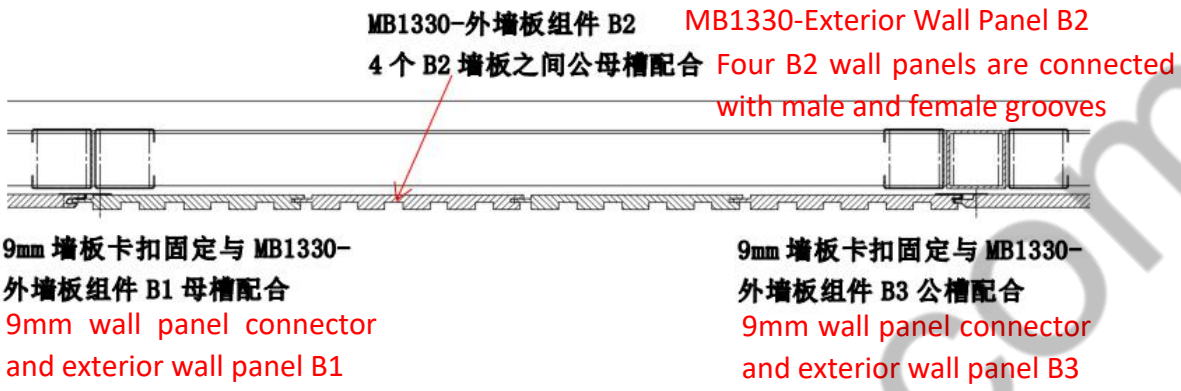

MB1330-Exterior Wall Panel B2 Installation

E. Similar installation for MB1330-Exterior Wall Panel B3 to Wall Panel B2. They are also also connected with 9mm wall panel connector and fixed with cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13, then connect B3 to B2 and B4 by the male and female grooves.

F. The left side of MB1330-exterior wall panel B4 is connected with the same male and female grooves, 9mm wall panel connector, and cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13 as the previously installed wall panels. In order to offset the installation deviation, an MB1330-45 aluminum middle strip is used at the connection point between the B4 wall panel and the B5 wall panel. The edges of the panels that match the aluminum middle strip are flat, and the aluminum middle strip is still fixed on the keel with cross-recessed pan-head self-tapping and self-drilling screws ST3.5 *13 (every 400 - 500mm interval) , as shown in the picture:

TRAVEL

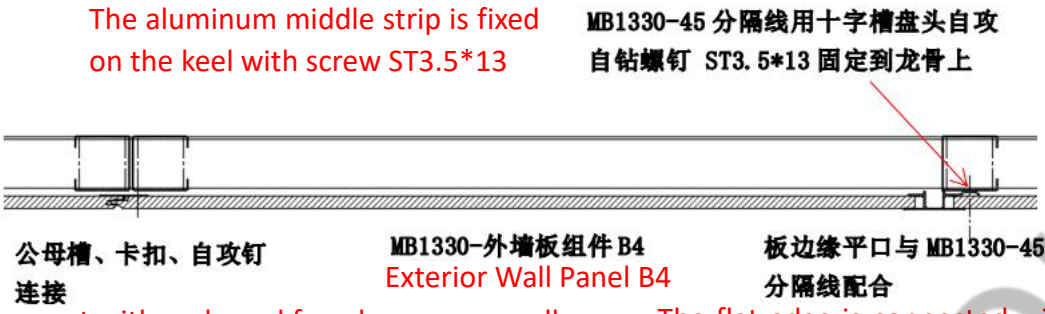

MB1330-Exterior Wall Panel B4 Installation

G. The left side of MB1330-exterior wall panel B5 is connected with the MB1330-45 aluminum middle strip, and the right side is connected with the MB1330-aluminum edging strip. The strips are fixed with cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13.

Shelter-dome.com

The flat edge is connected with the aluminum middle strip.

The flat edge is connected with aluminum edging strip.

MB1330-Exterior Wall Panel B5 Installation

H. The installation of the exterior wall panel on the side with the bed

Completed Assembly Picture of Exterior Wall Panels on the Side with Bed

I. The installation method of entrance side exterior wall panels from D1 to D5 is the same as that of exterior wall panels from B1 to B5. Please be noted that the installation sequence starts with MB1330-exterior wall panel D5 and ends with MB1330-exterior wall panel D1.

Shelter-dome.com

Completed Assembly Picture of Exterior Wall Panels at the Entrance Side

J. MB1330-exterior wall panel C1 is installed in the same way as MB1330-exterior wall panel B1. They are both connected with 9mm wall panel connectors and cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13, as shown in the figure:

MB1330- Exterior Wall Panel C1

Shelter-dome.com

K. MB1330-Exterior Wall Panel C3 is installed in the same way as the previous exterior wall panels, connected with 9mm wall panel connectors and cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13. Keep exterior wall panel C3 flush with the bottom of exterior wall panel C2.

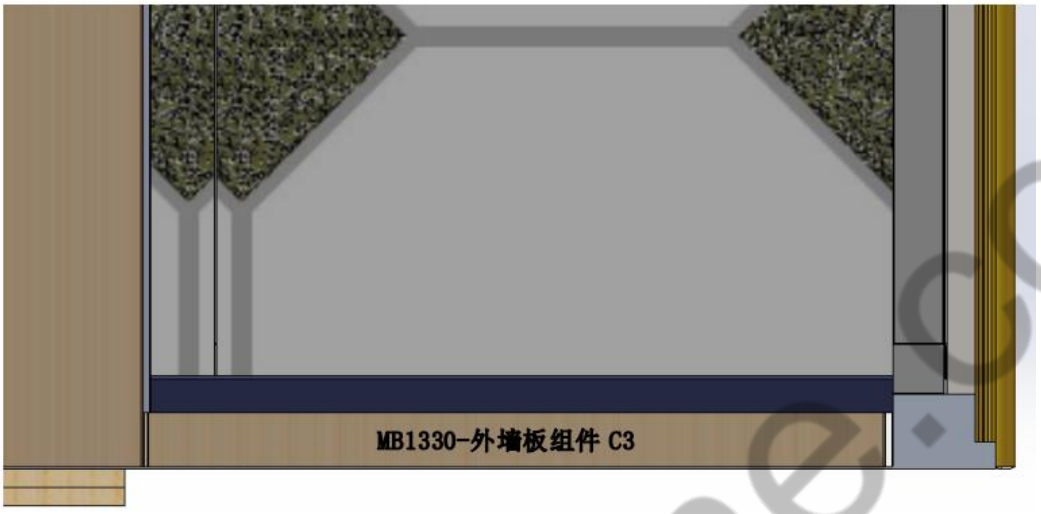

MB1330- Exterior Wall Panel C3

L. MB1330-exterior wall panel C4 is inserted into the slot of MB1330-exterior wall panel C3 and MB1330-aluminum edging strip from top to bottom. Insert MB1330-exterior wall panel C2 into the slot of MB1330-exterior wall panel C1 and MB1330-exterior wall panel C4 from the top, align the top with Exterior Wall Panel C1, and connect exterior wall panel C2 and C4 with 9mm wall panel connector. If the wall panel connector is difficult to install, you can use glass glue to replace it.

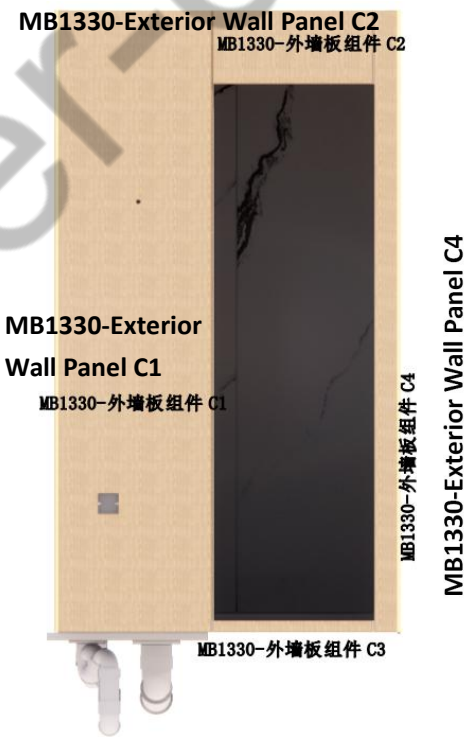

MB1330- Exterior Wall Panel C4, C2

Shelter-dome.com
TRAVEL

M. Install aluminum trim strips on the top of the four exterior wall panels and use glass glue to fix them to the exterior wall panels.

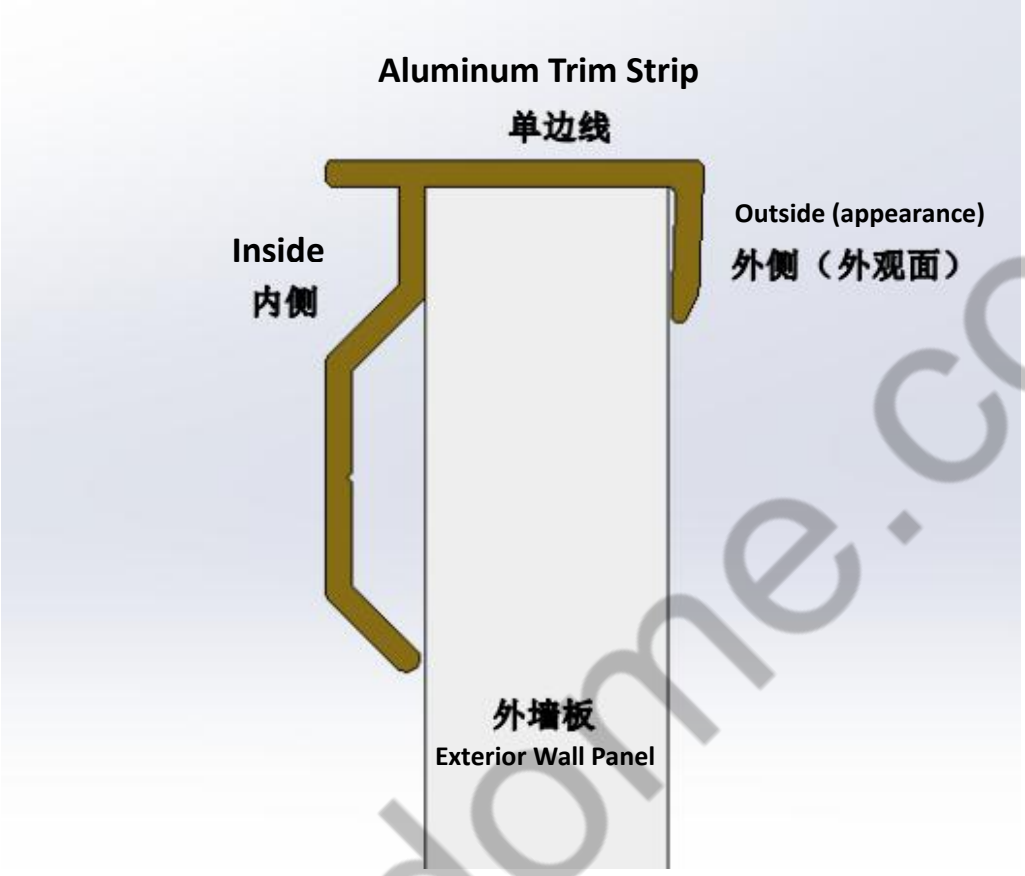

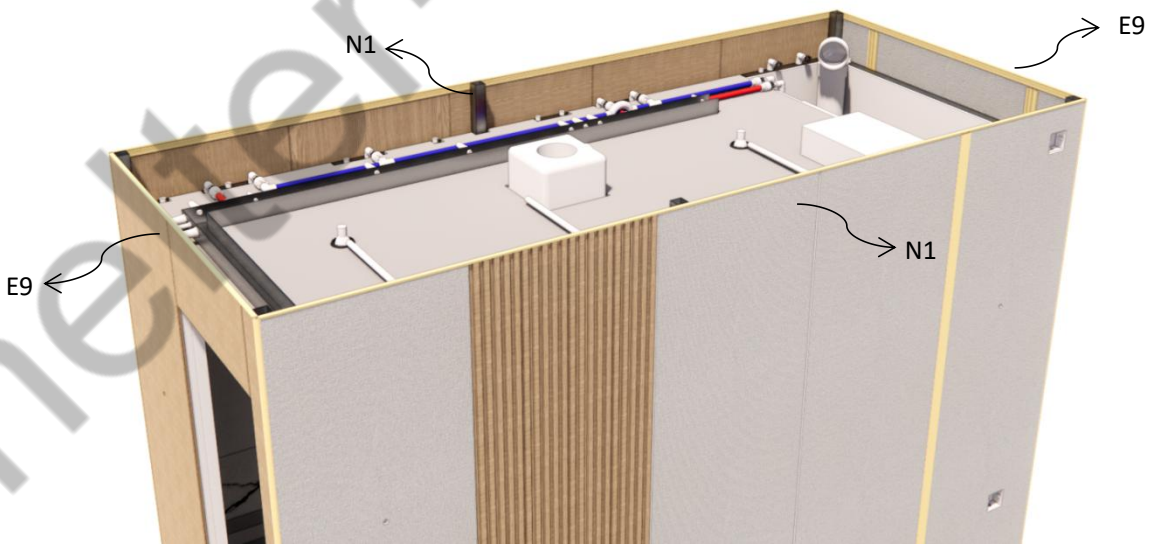

Note: 1. When installing, make sure the wall panels and edge strips are horizontal and vertical; 2. The male and female grooves must be matched tightly without leaving any gaps, and the front and rear ends of the joints must be consistent.

Shelter-dome.com

2.6 Quick Installation of Water and Electricity Lines

2.6.1. Installation of Water Pipes and Strong Power Distribution Box in Equipment Room. MB1330-cold water inlet pipe assembly and MB1330-hot water inlet pipe assembly are positioned according to the size shown in the figure, then fix them with the pipe clamps, cross-recessed countersunk head self-tapping & self-drilling screws ST4.2*25, and plastic dowel pin. Finally, use the stainless steel corrugated inlet pipe 30cm to connect the hot and cold water inlets of the ceiling kit. The distribution box is fixed with cross-recessed countersunk head self-tapping and self-drilling screws ST4.2*25 and glass glue, as shown in the picture below.

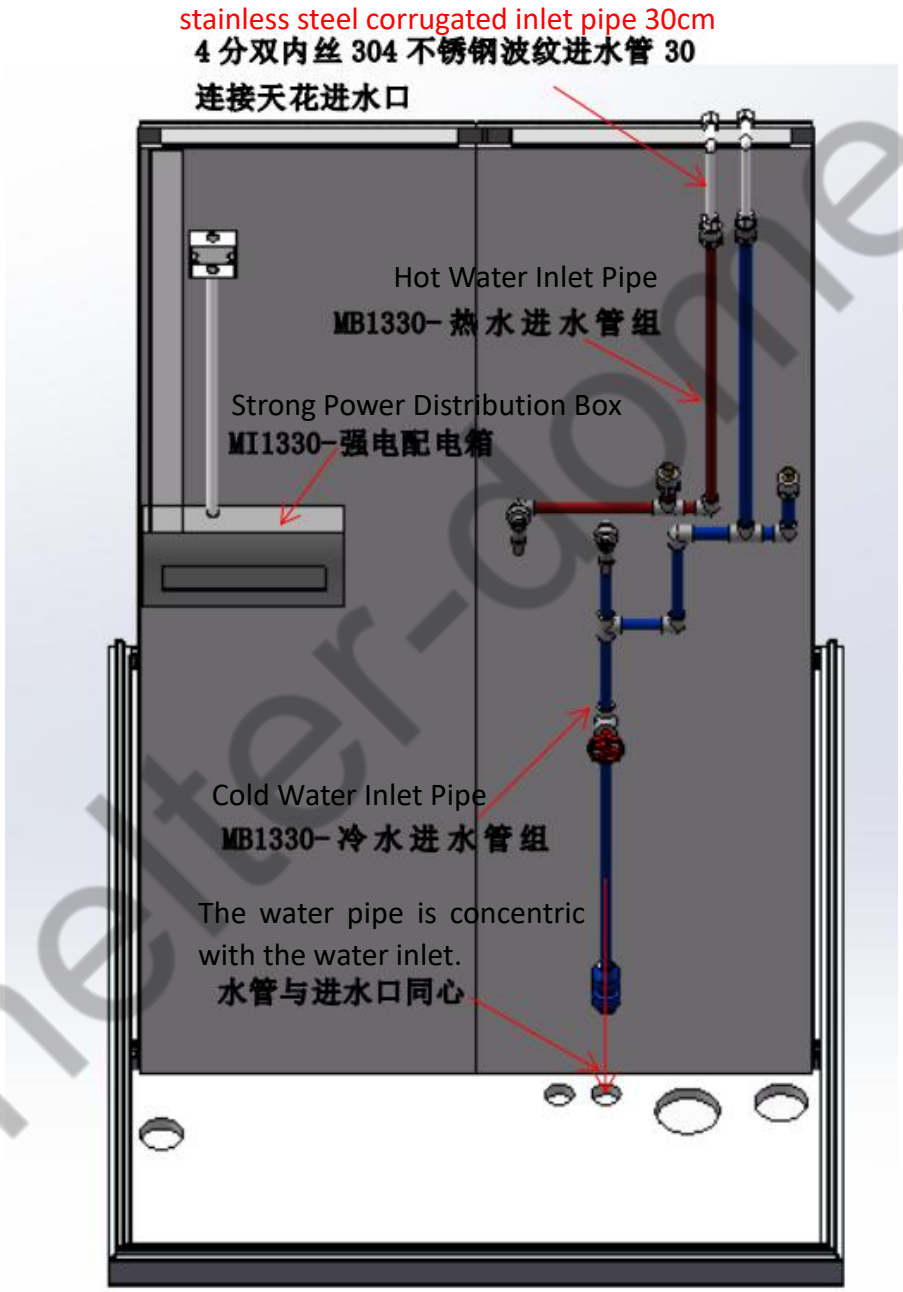

TRAVEL
Shelter-dome.com

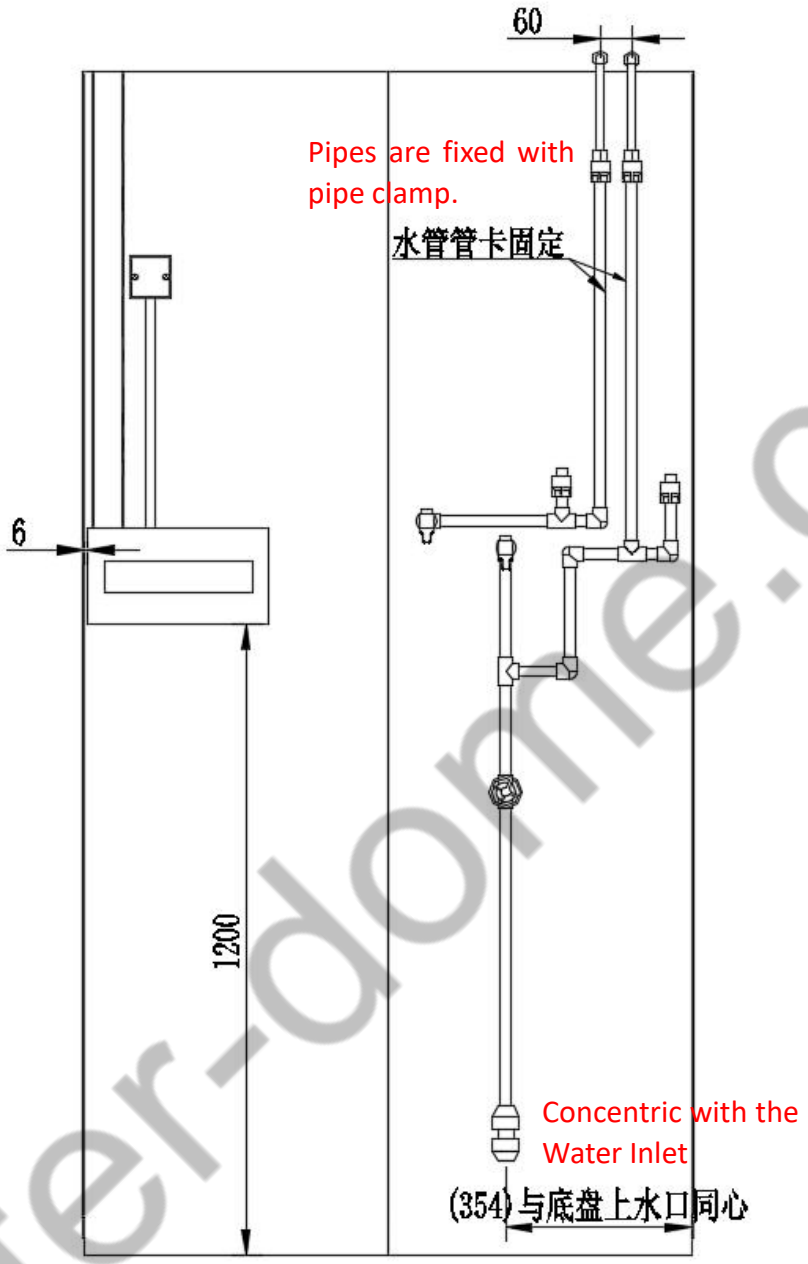

Installation Measurement Sketch of Water and Electricity Pipes in Equipment Room

Shelter-dome.com

Pipes are fixed with pipe clamp.

The pipe clamp is fixed to the wall panel with cross-recessed pan-head self-tapping and self-drilling screws ST3.5*13.

Water and Electricity Pipe Installation Details

2.6.2. Water Heater and Water Pipe Installation.

First install the water heater hanger with the screws provided with the parts to fix it, then hang the water heater on the hanger, and use a 4-point double inner wire 304 stainless steel corrugated water inlet pipe 60cm to connect the hot and cold water interface of the water heater in the picture. At the location shown in the installation diagram, use a 4-point double inner wire 304 stainless steel corrugated water inlet pipe 150cm to connect the hot and cold water of the kitchen.

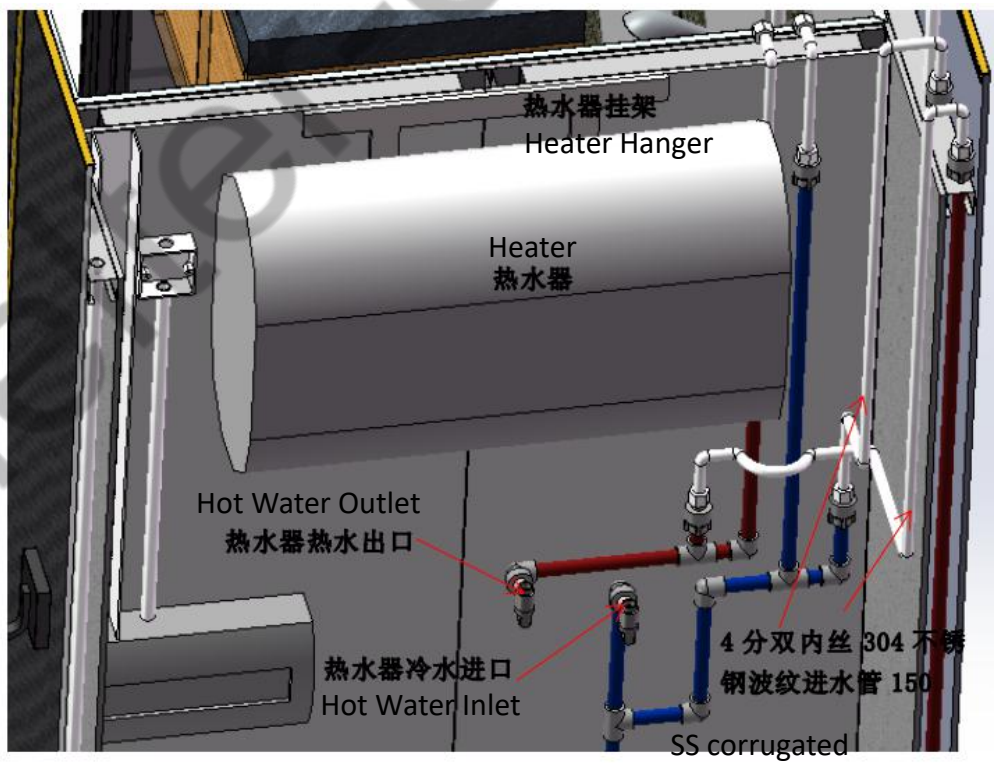

TRAVEL

2.6.3. Use 10mm² wires to connect the main electrical box inlet of the equipment room. To ensure safety, no power can be connected until the bathroom is installed. Connect the uninstalled quick-plug connector according to the designated alignment number, and make sure the connector is firm and not loose.

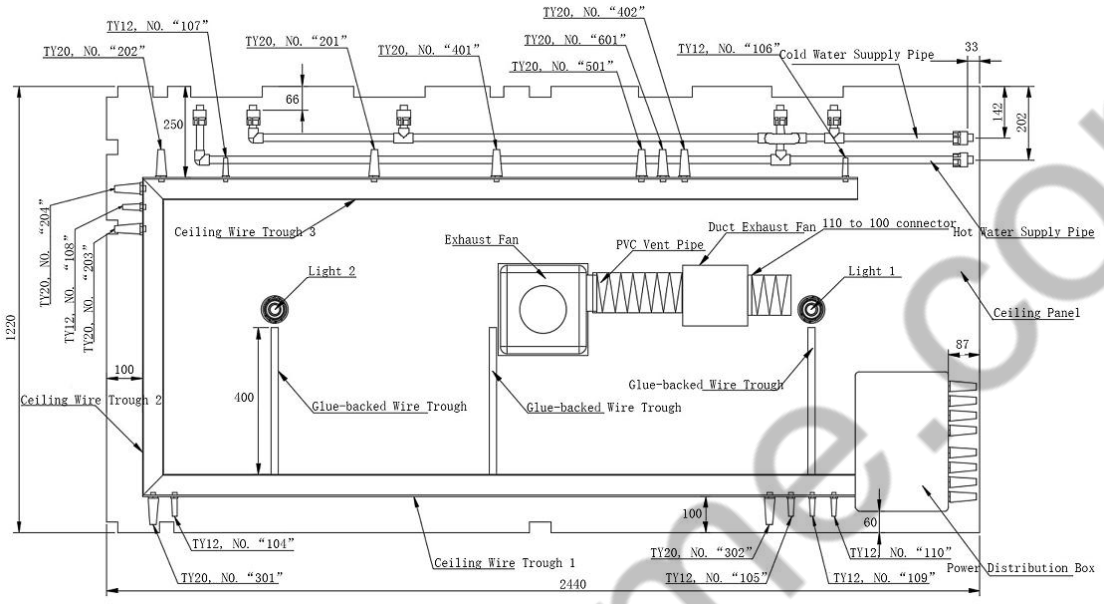

Ceiling Circuit Alignment Diagram

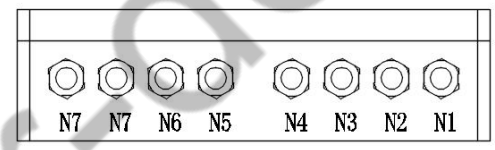

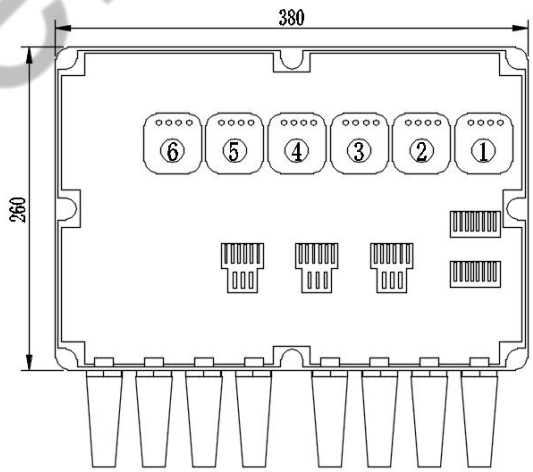

Power Distribution Box Wiring Number

Shelter-dome.com

2.6.4. Smoke Exhaust Pipe Installation. Use aluminum foil telescopic exhaust hose to connect the ceiling exhaust fan outlet and PVC exhaust pipe, and fix it with clamps and aluminum foil tape to ensure the sealing effect.

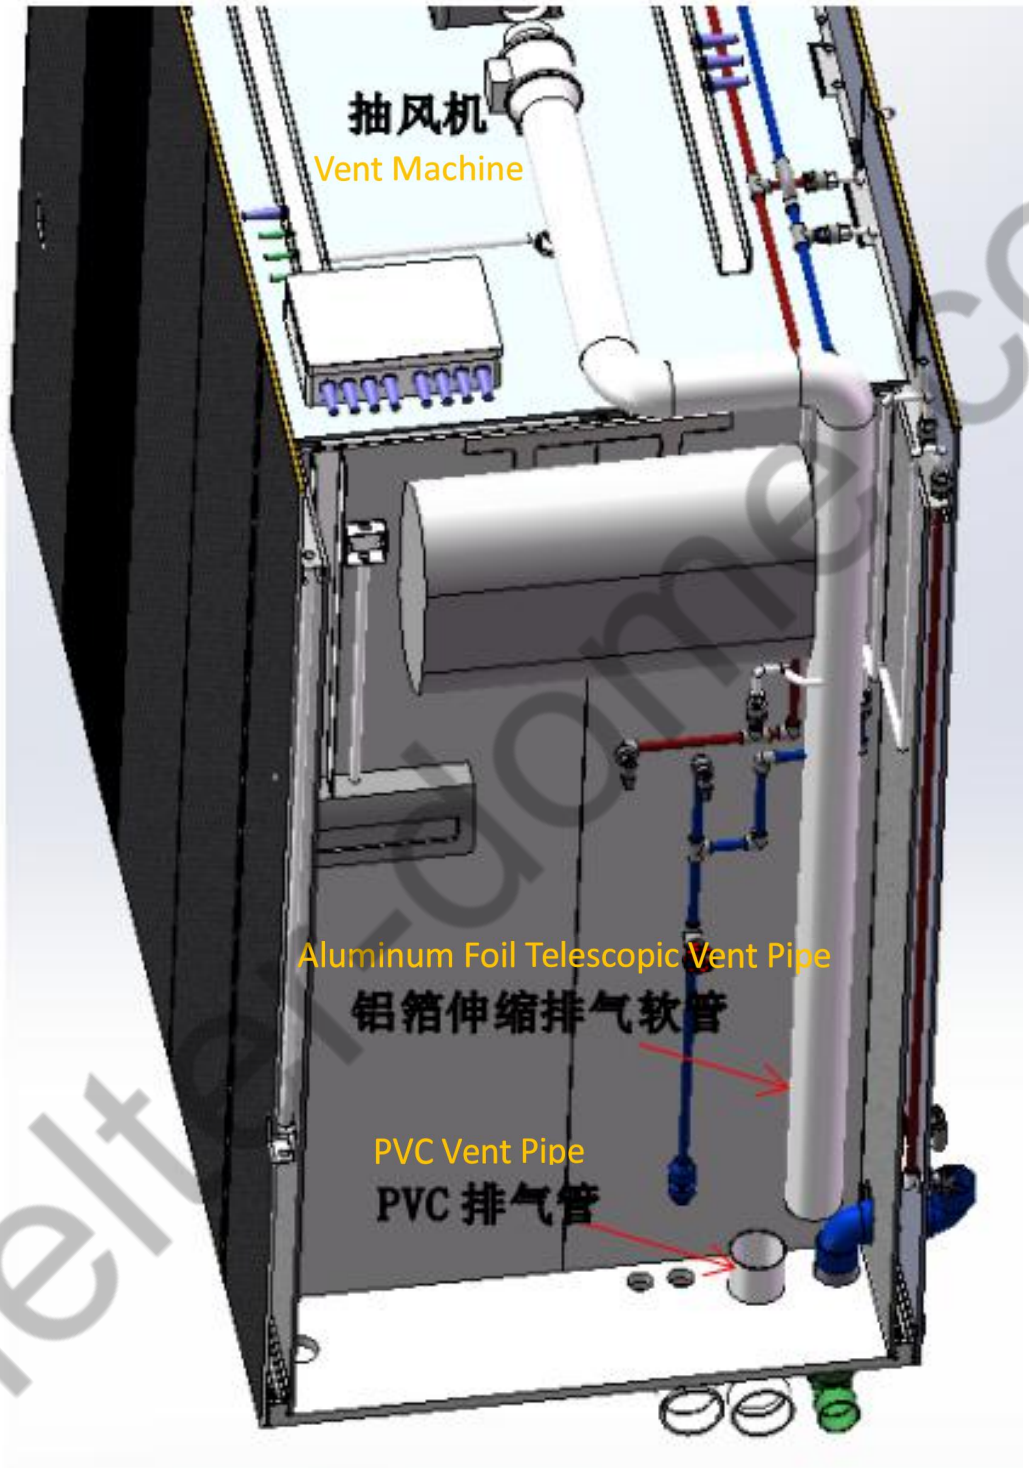

Smoke Exhaust Pipe Installation Diagram

Shelter-rgame.com

2.6.5. The Installation of the protective cover of the socket inside the bathroom. The white ultra-thin waterproof box is stuck on the wall with its own double-sided tape to cover the socket.

Installation of Waterproof Box for the Sockets

2.7 Door Installation

2.7.1. Installation of Bathroom Entrance Glass Door. First, install the door casing lines, and try to install them according to the direction shown on below figure. After the position is determined, use glass glue to fix it. Fasten the entire door assembly to the door opening of the exterior wall panel to ensure the horizontality and verticality. Open the door and fix the door frames on both sides to the keel with bolts to secure them firmly. Use cross-recessed countersunk head self-tapping and self-drilling screws ST4.8*45 (every 400-500mm interval) on the left frame of the entrance door, the right frame of the entrance door is fixed with cross recessed countersunk head self-tapping and self-drilling screws ST4.8*100 (every 400-500mm interval).

Shelter-dome.com

Shelter-dome.com

Glass Door Installation

2.7.2 Bathroom Storage and Equipment Room Door Installation. Use a 4-inch stainless steel flag-shaped hinge to install the left door leaf, the hinge is fixed with cross-recessed countersunk head self-tapping and self-drilling screws ST4.2*25 to ensure the horizontality and verticality. Then install the right door leaf in the same way.

Shelter-store.com

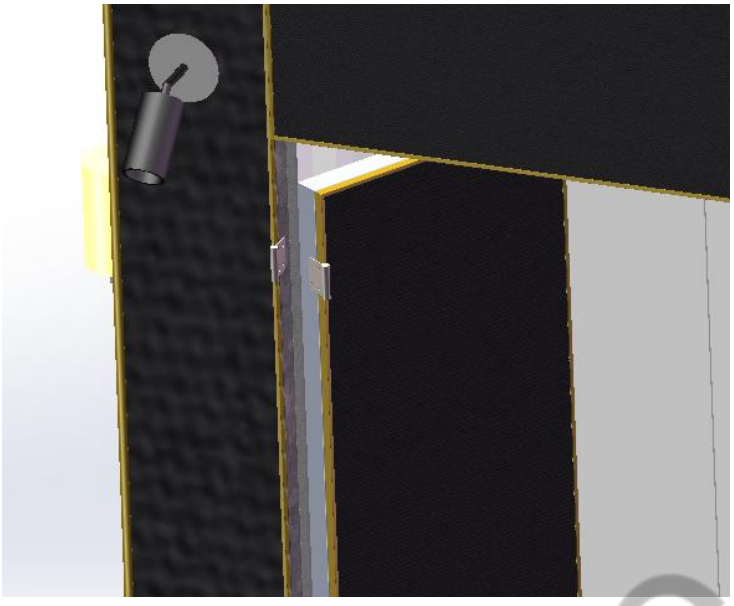

Bathroom Storage and Equipment Room Door Installation

Shelter-dome.com

2.8 Loft Bet Installation

2.8.1 First install the loft bed connecting flange, and use hexagonal head bolts M8*16 and flat washers Φ8 to connect the flange to the column. Loft bed left frame and loft bed right frame are connected to the flange with They are also fixed with the same bolts and washers. Finally, install the loft bed board left and loft bed board right, the loft bed left board gap can align with the high-voltage distribution box on the ceiling for easy maintenance.

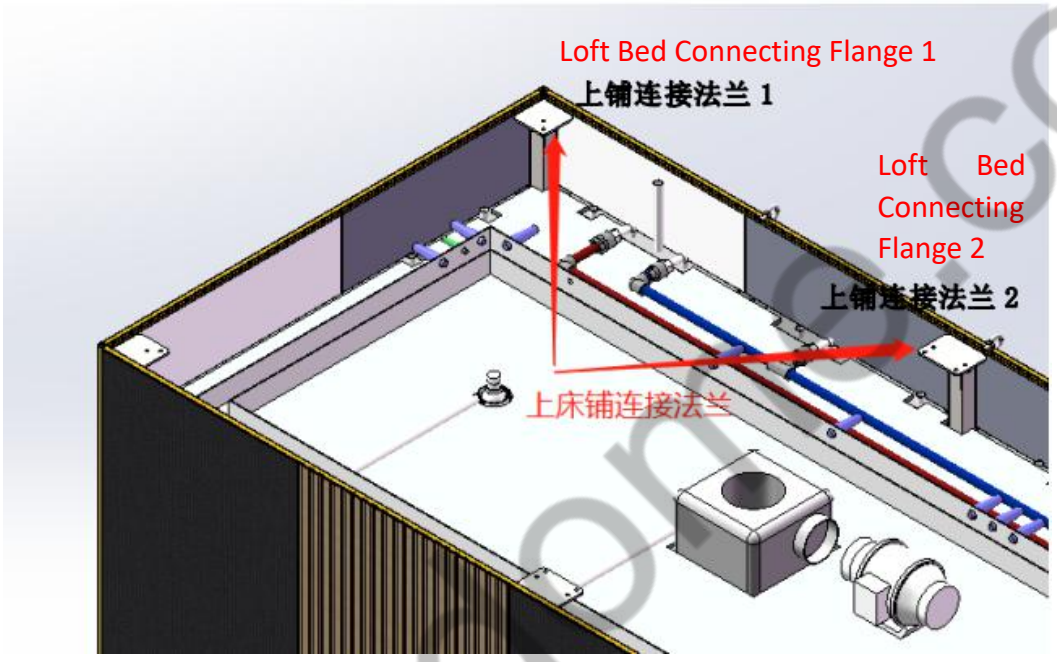

Loft Bed Connecting Flange Installation

The loft bed left board gap can align with the high-voltage distribution box on the ceiling.

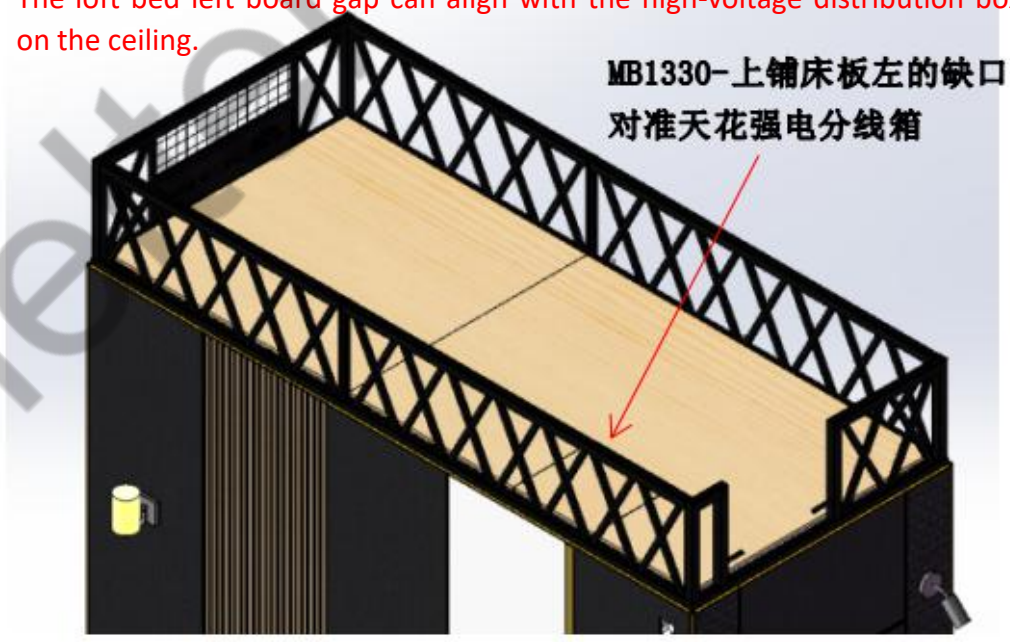

Loft Bed Installation

Shelter-Group.com

3. Kitchen Installation

❶ 衣柜 Wardrobe
❷ 水吧 Bar Counter
❸ 水吧桌 Bar Table
❹ 吧台椅 Bar Chair

Kitchen

3.1 Wardrobe Installation

First install the shelves, the right panel and the left panel according to the positions shown on below photo, then install the bottom panel and top panel to the left and right panels, then install the skirting panels, then install the drawers, then install the door panels, and finally install the clothing rod. Three-in-one screws are used to connect each panel. For the connecting method, please refer to the three-in-one screw installation details. The handles, drawer guides, and hinges are all fixed to the panels with 2.9*16 self-tapping screws.

Shelter-Dome.com

Hinges are fixed to the panels with 2.9*16 self-tapping screws.
铰链
自攻螺丝 2.9*16 固定
衣通+底座
Clothing Rod and Base
厚背板
Back Panel
右侧板、左侧板
Right & Left Panel
Handle fixed by 2.9*16 self-tapping screw
拉手
自攻螺丝 2.9*16 固定
顶板、底板、层板
Top Panel, Bottom Panel, Shelf
门板左
Door Left Panel
抽面
Drawer Panel
前踢脚板
Front Skirting Panel

Shelter.com

Wardrobe Installation

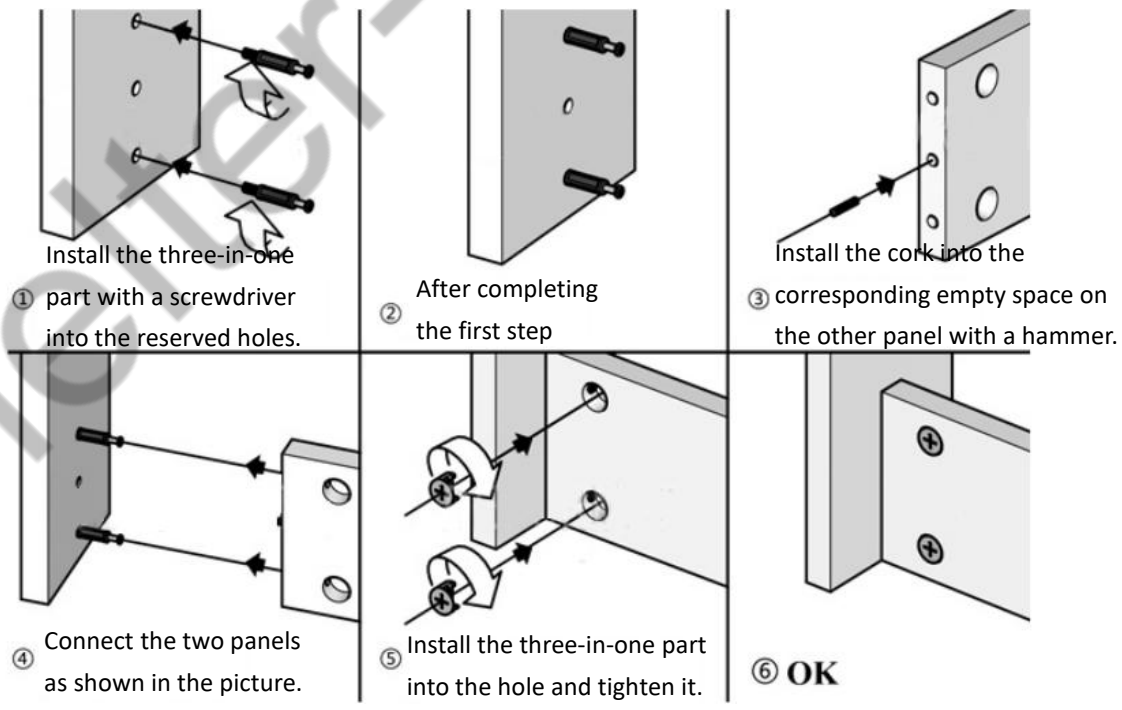

Three-in-one Screw Installation Details

TRAVEL

3.2 Bar Counter Installation

First, install the bottom panel, left panel, and right panel, then install the rear braces and front braces to the panels and the skirting panels, then install the stone panels and retaining pools, then install the door panels, and finally install the faucets and related water pipes. Three-in-one screws are used to connect the wooden panels. Glass glue is used to bond the wooden panels and the stone countertop. The stone countertop and the water retaining stone are also bonded with glass glue. The door hinges are connected by 2.9*16 self-tapping screws.

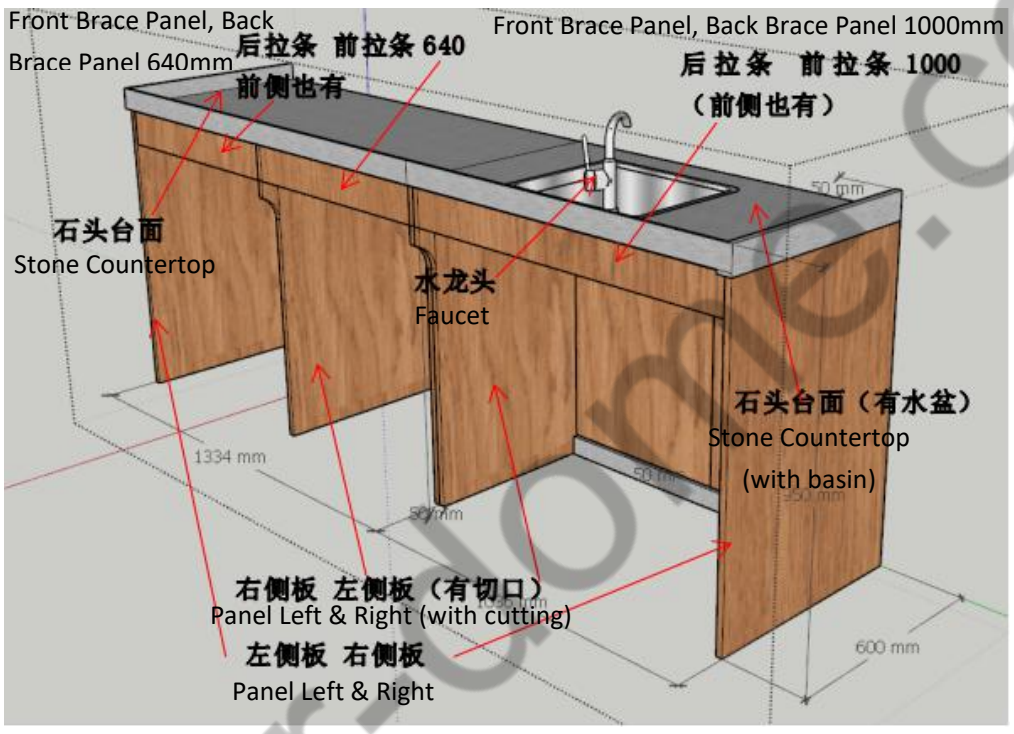

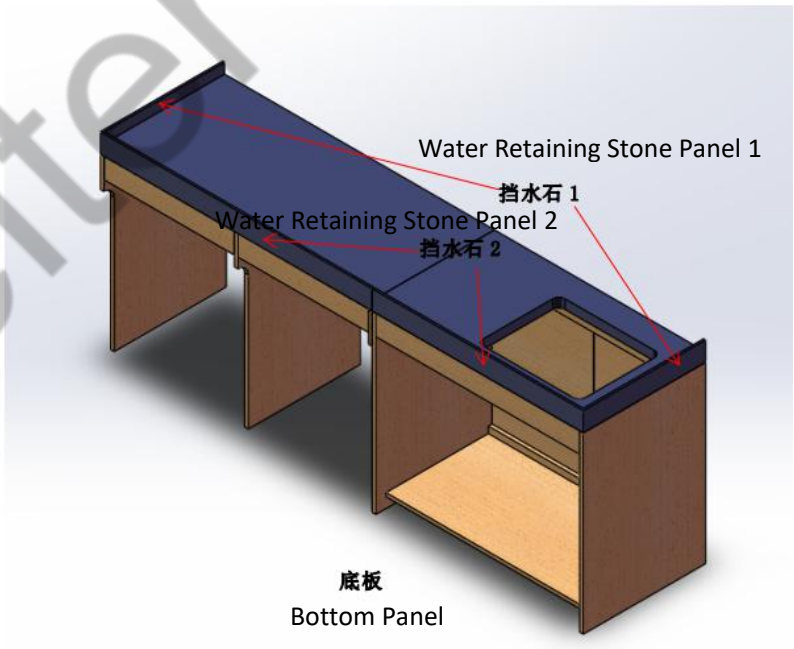

Shelter-dome.com

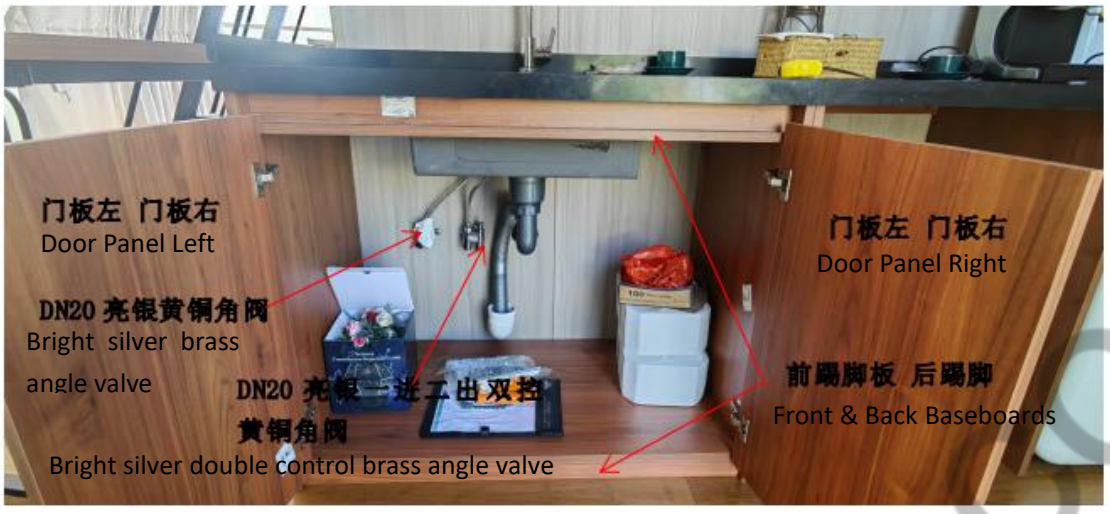

Bar Counter Installation

Bar Counter Pipe Installation. The hot water inlet pipe is connected to the hot water outlet (left side) on the wall panel with a DN20 bright silver brass angle valve, and the cold water inlet pipe is connected with a DN20 bright silver double control brass angle valve to the cold water outlet on the wall panel (right side), the hot and cold water pipes are connected to the faucet of the basin. Then get the drain outlet in the equipment room to the outside of the wall panel with PVC-U drain pipe elbow joint DN75 and DN75 drain pipe fitting 3 (ϕ75*118) to guide the drain outlet in the equipment room to the outside of the wall panel, and then put the basin drain pipe into the drain outlet.

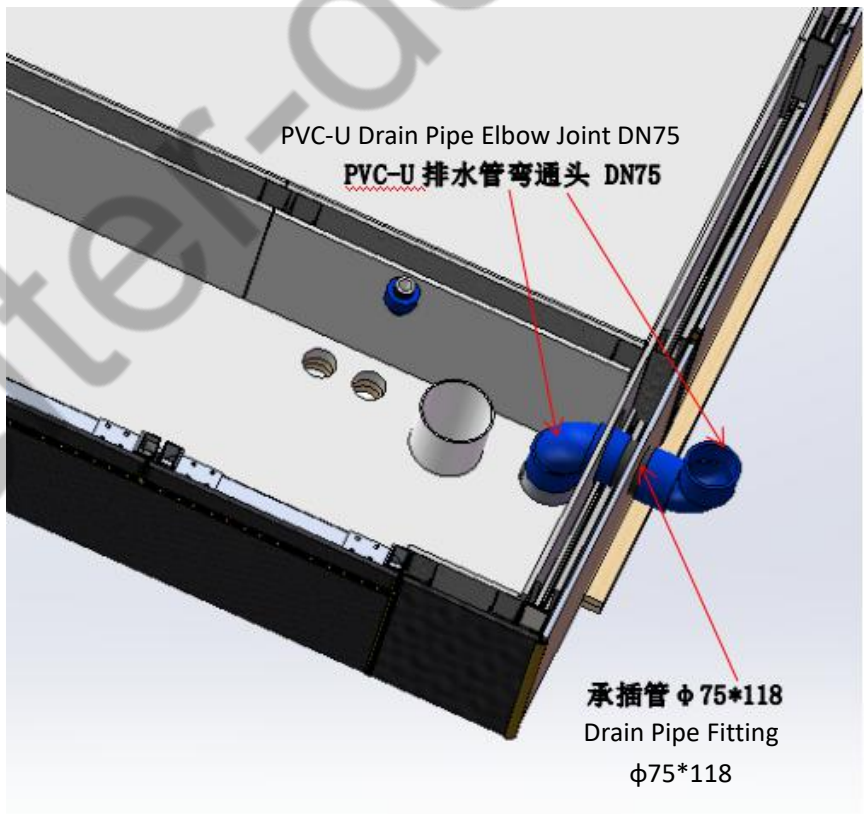

Counter Bar Drain Pipe Connecting

Shelter-dome.com

3.3 Bar Table Installation

First connect the square support tube to the side bracket through the male and female buckles, turn the table upside down and place it on the flat ground, flip the shelf upside down on the table, and connect the shelf and the table with 2.9*30 self-tapping screws to.

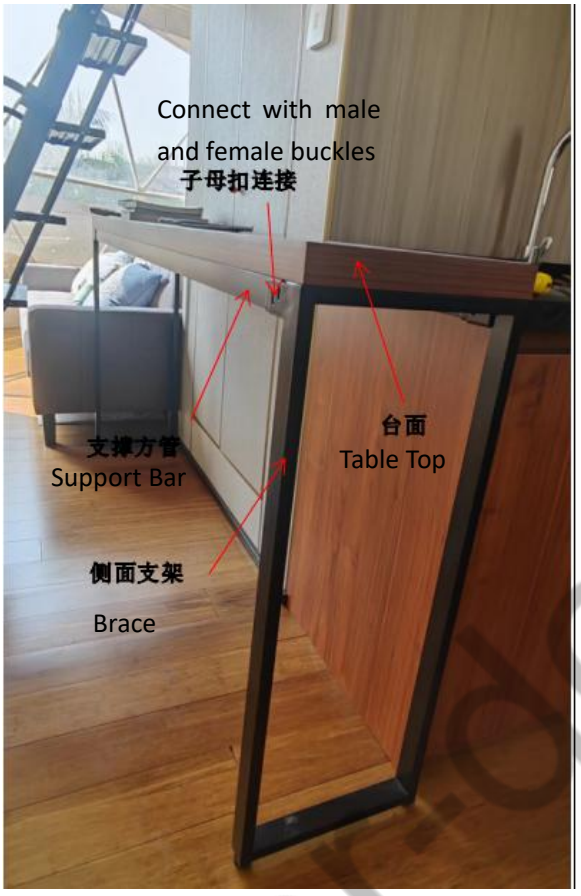

Counter Table Installation

4. Checking and Cleaning

1) There should be no damage or scratches on the surface (ceiling, glass, profiles, internal accessories);

2) Make sure all inner and outer angles must be vertical and the angle must be controlled at 90°;

3) Check the circuit by pressing the switch multiple times to see if the lights are on normally, the sockets are powered on, and the vent fan is running normally;

4) Drainage inspection: whether the toilet flushes powerfully, whether it leaks, and whether the floor drain drains promptly and smoothly;

5) The partition should be installed firmly;

6) Check whether the internal accessories are level, vertical and stable;

7) Clean and sweep. Sweep with a broom first, then rinse and wipe with water).